


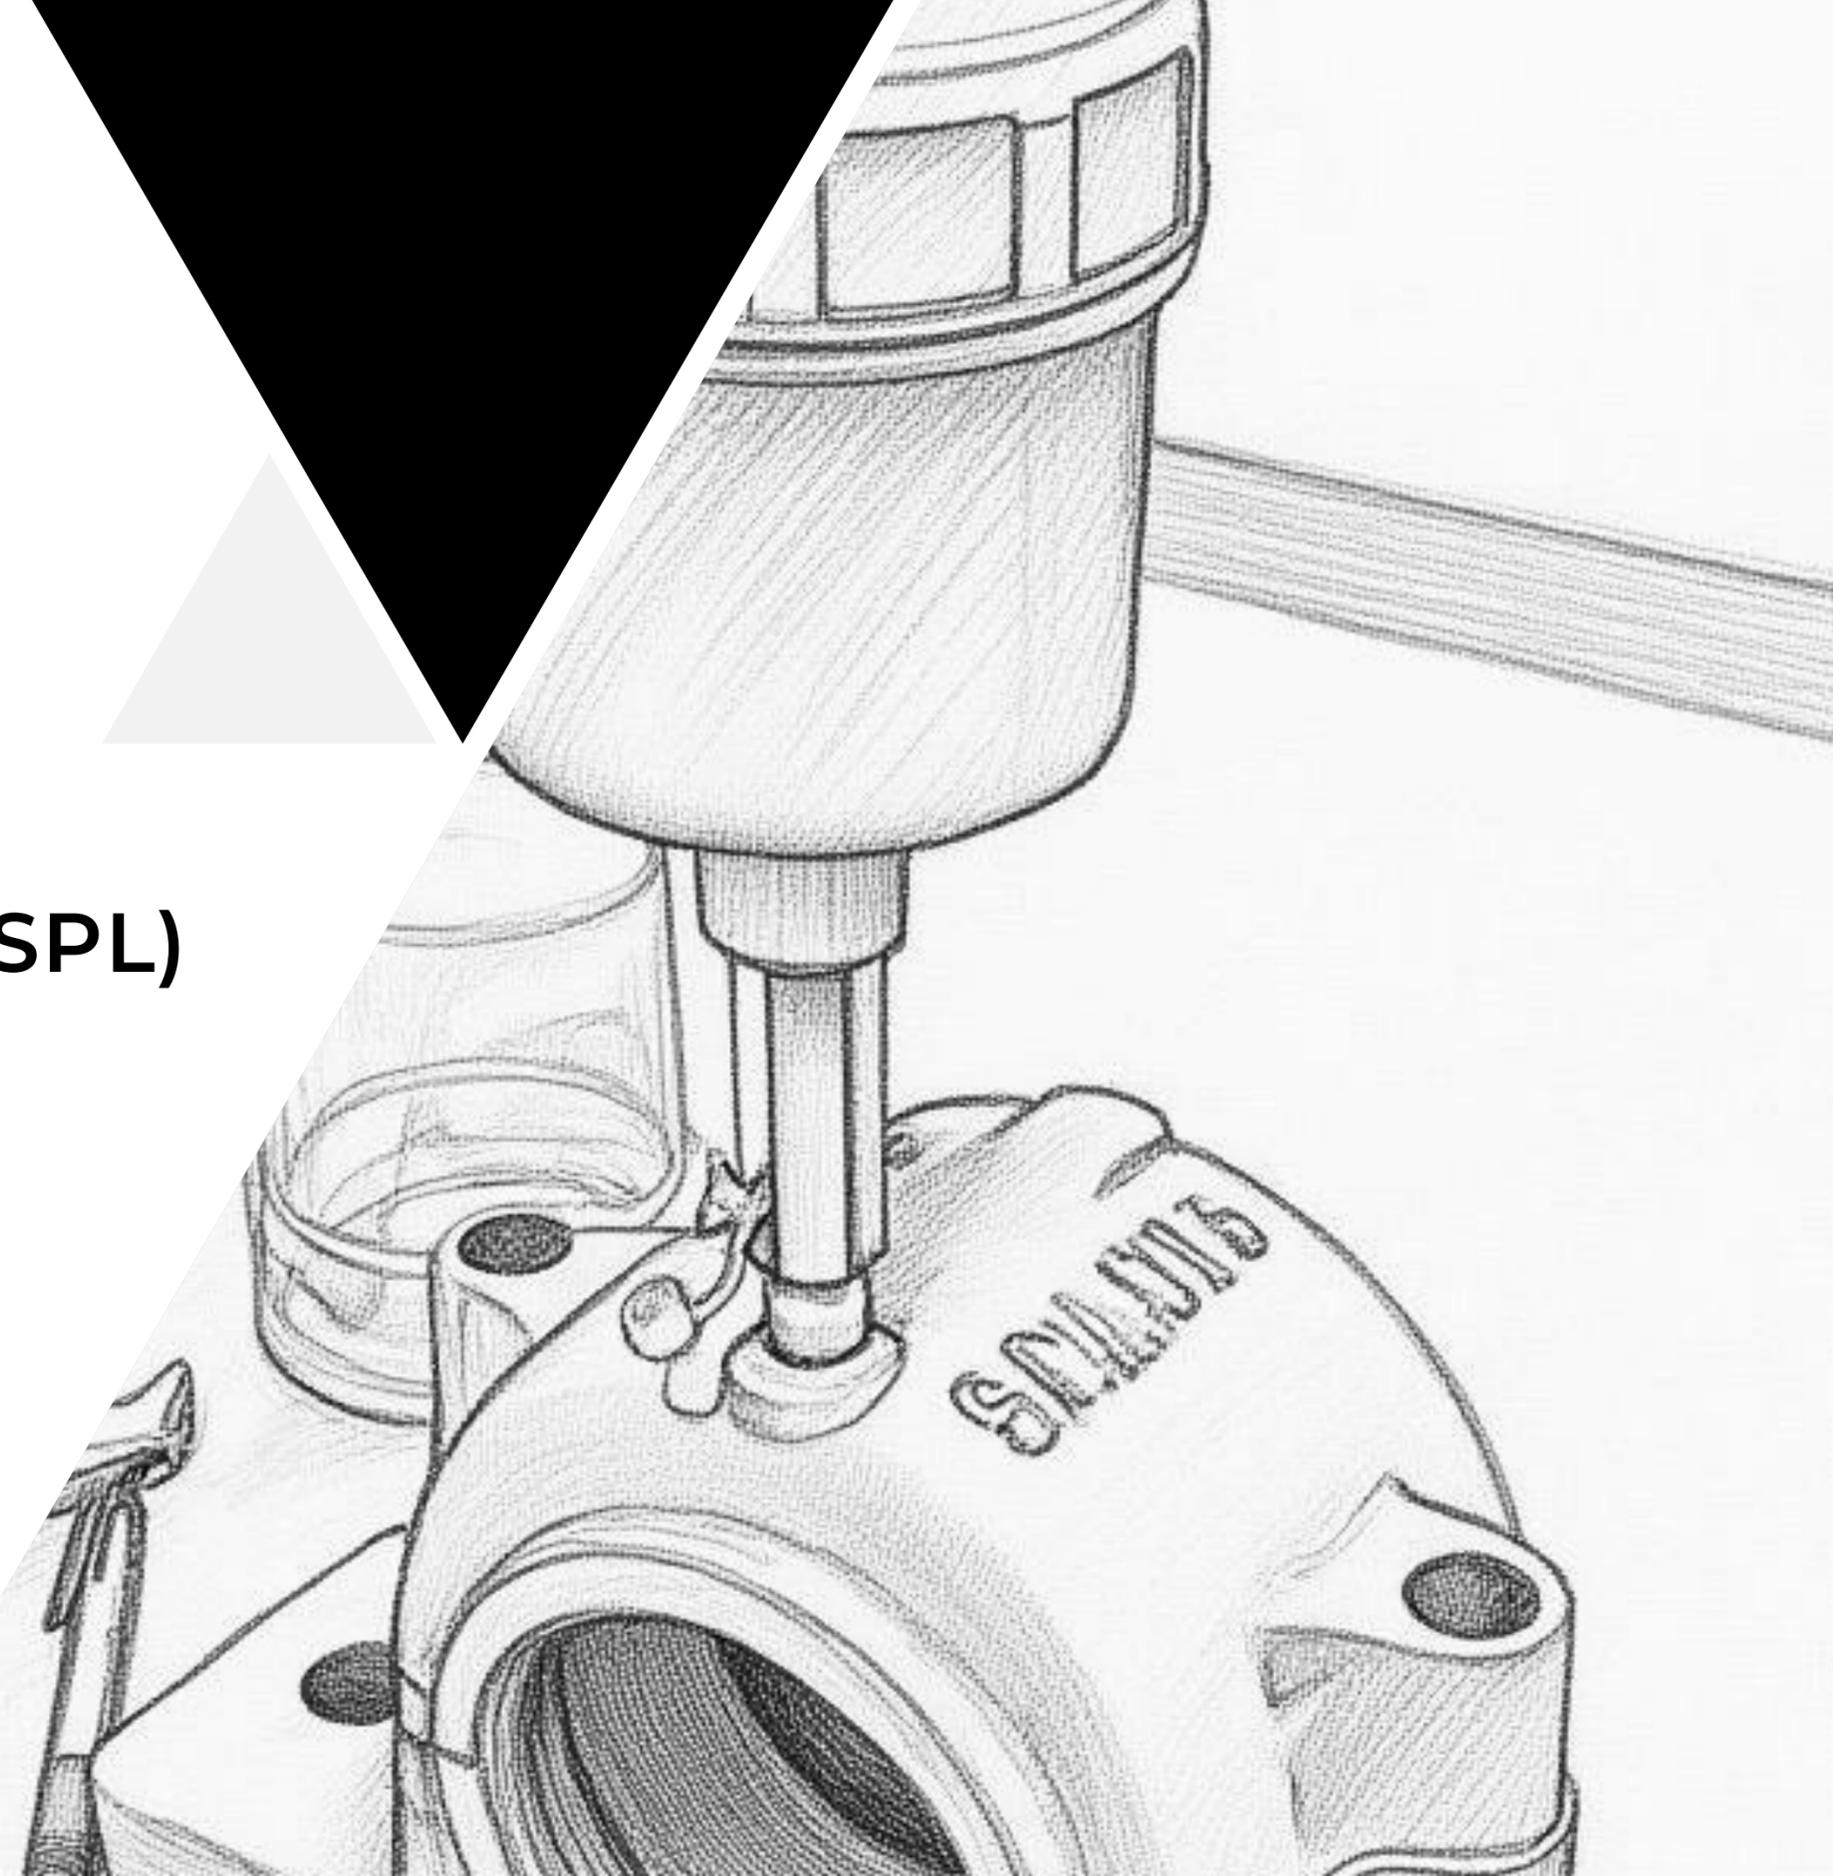


## HOW TO INSTALL **EASYLUBE** SINGLE POINT LUBRICATOR (SPL)

- DIRECT MOUNT

[www.catmacs.com](http://www.catmacs.com)





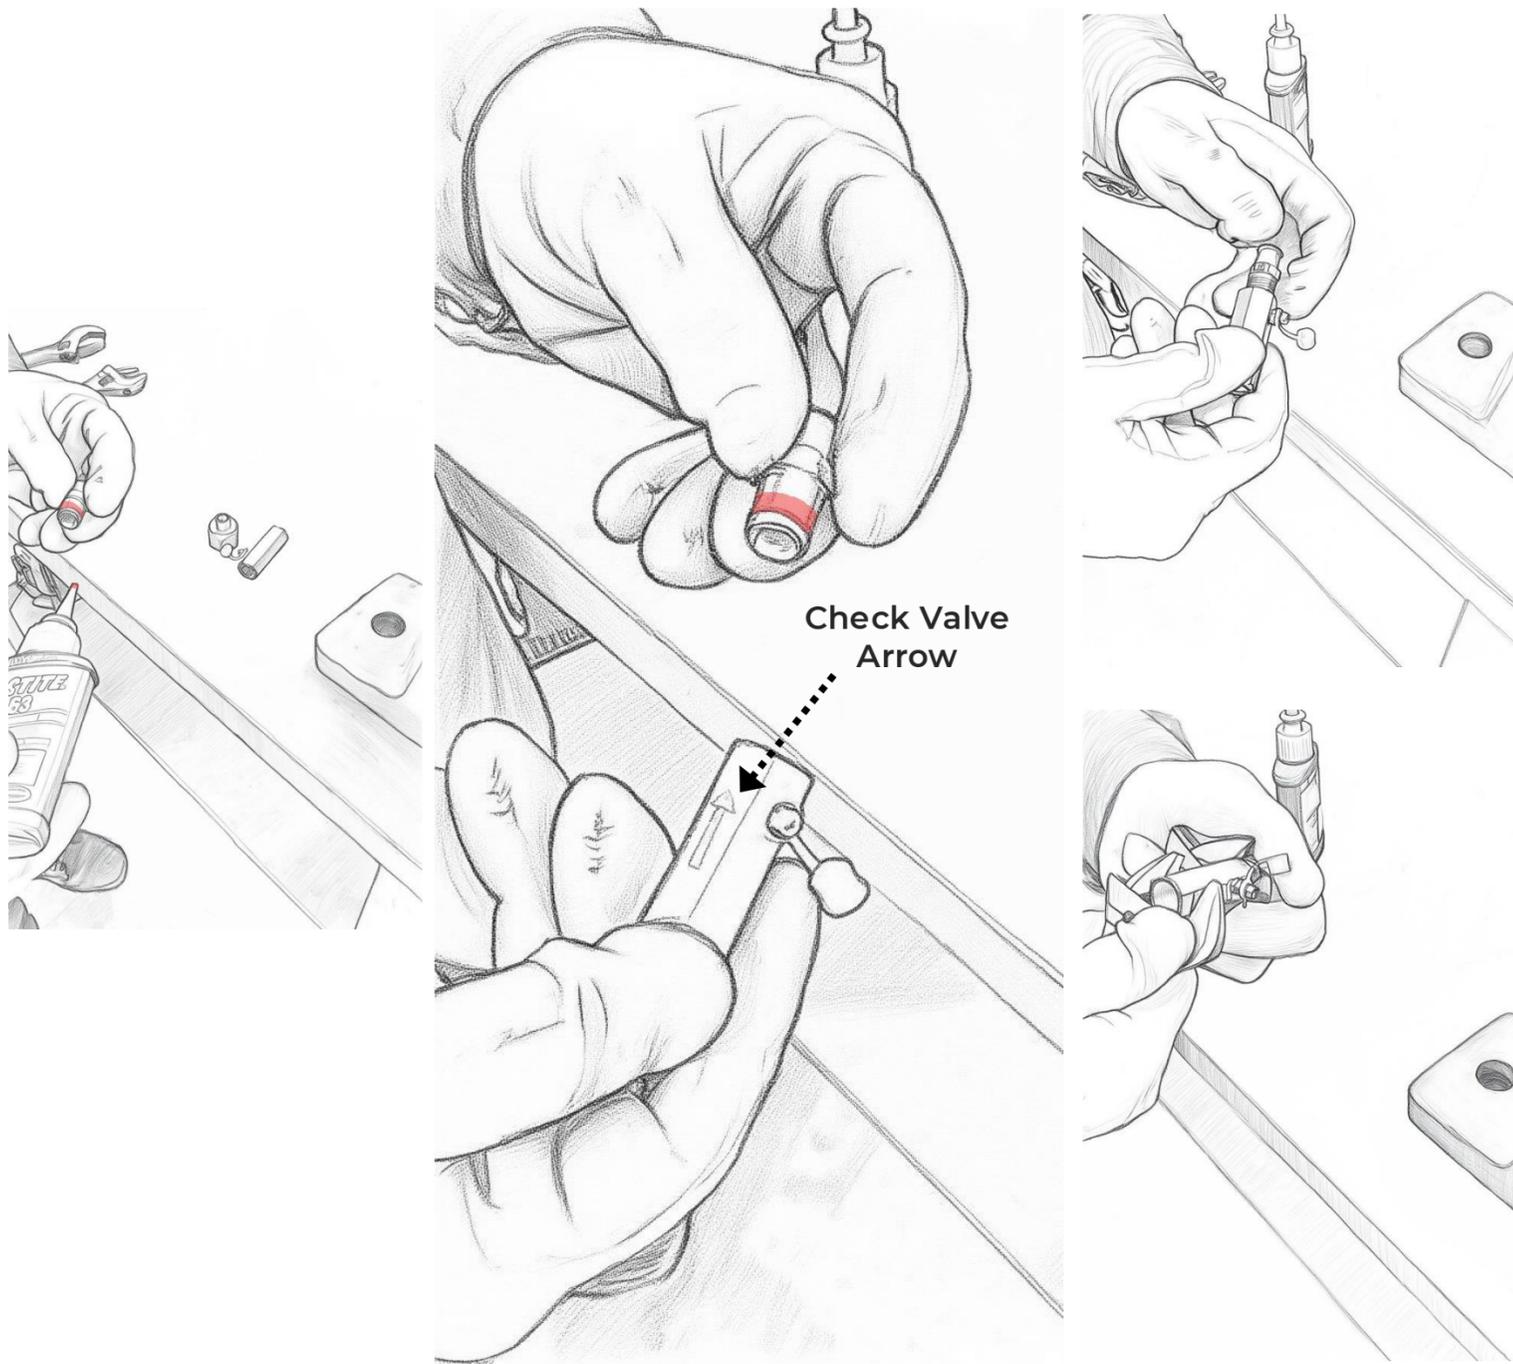

## STEP 1

**IMPORTANT:** ensure the check valve arrow is pointing in the direction of grease flow.

Lock tight the 1/4" thread of the required fitting into the bottom of the check valve.

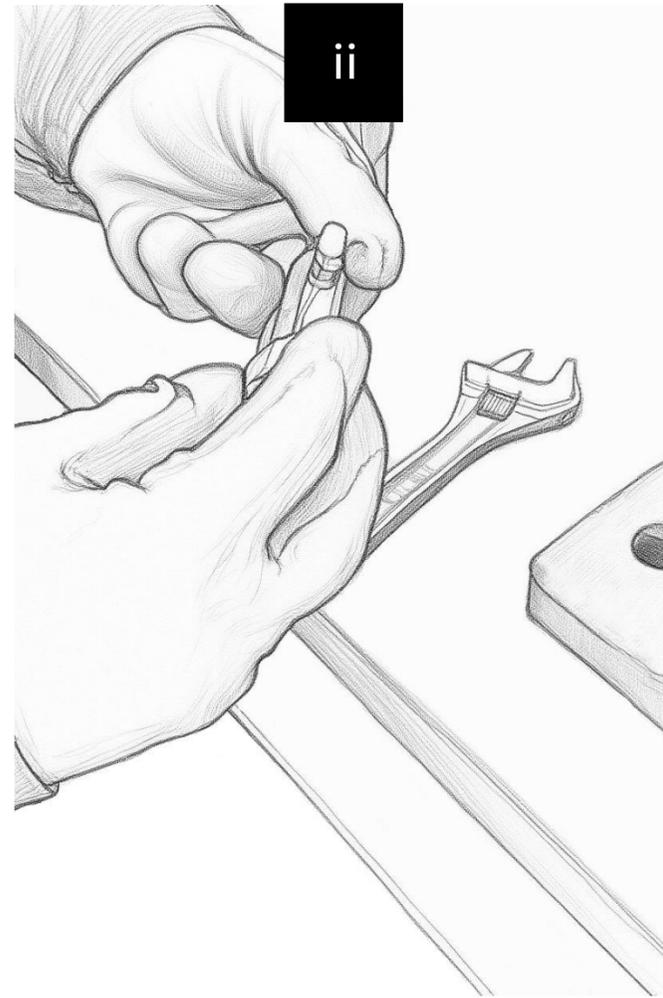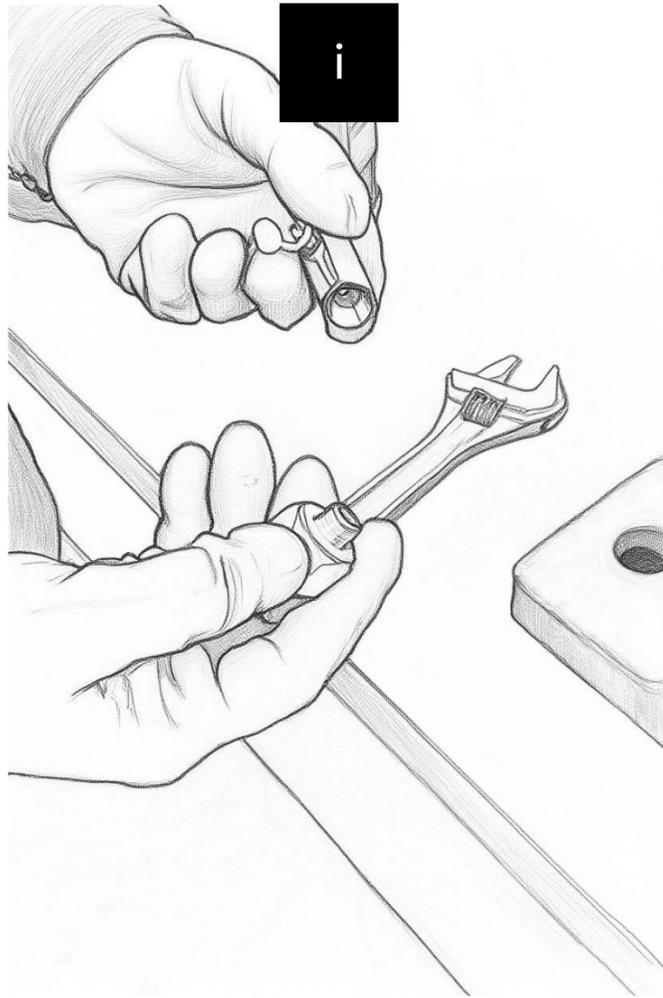


## STEP 2





Install the 1/2" – 1/4" fitting into the top of the check valve.

## STEP 3

- i. Clean the grease nipple.
- ii. Hand grease the nipple to ensure the bearing is accepting grease and isn't blocked.
- iii. Clean any excess grease from the grease nipple.

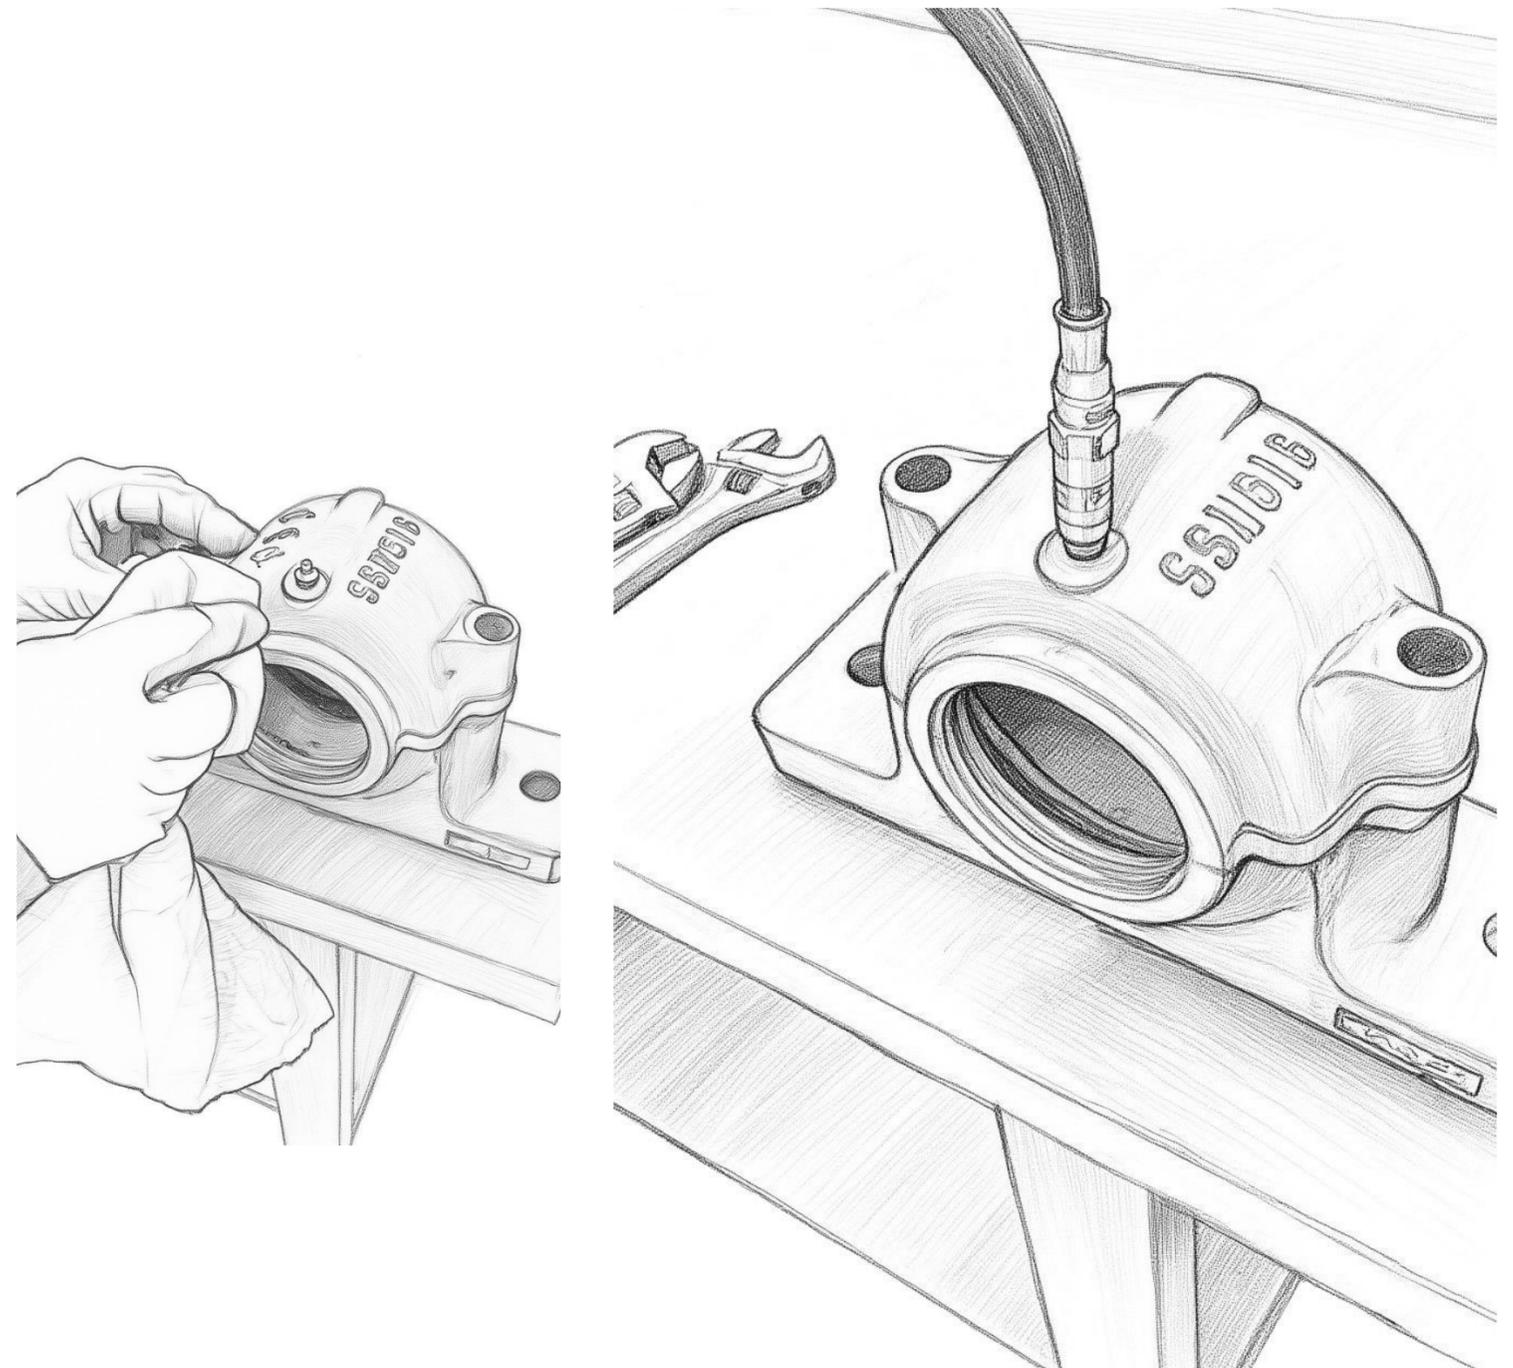

## STEP 4

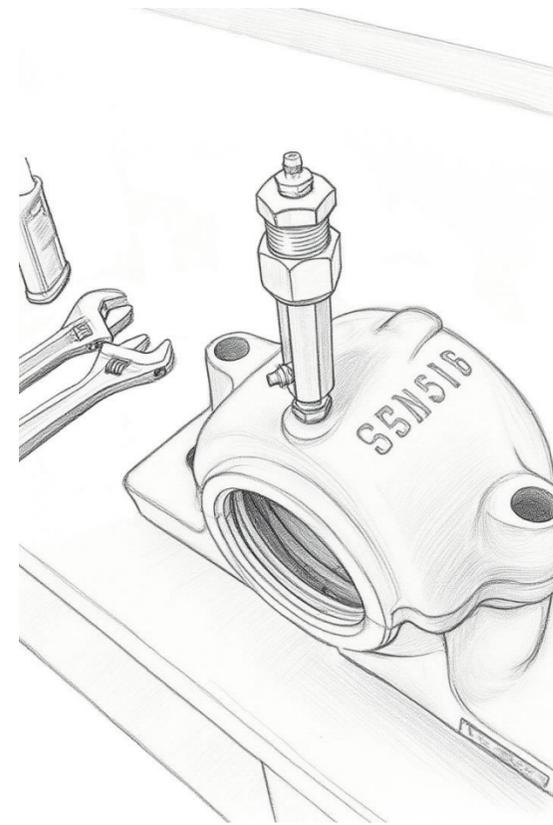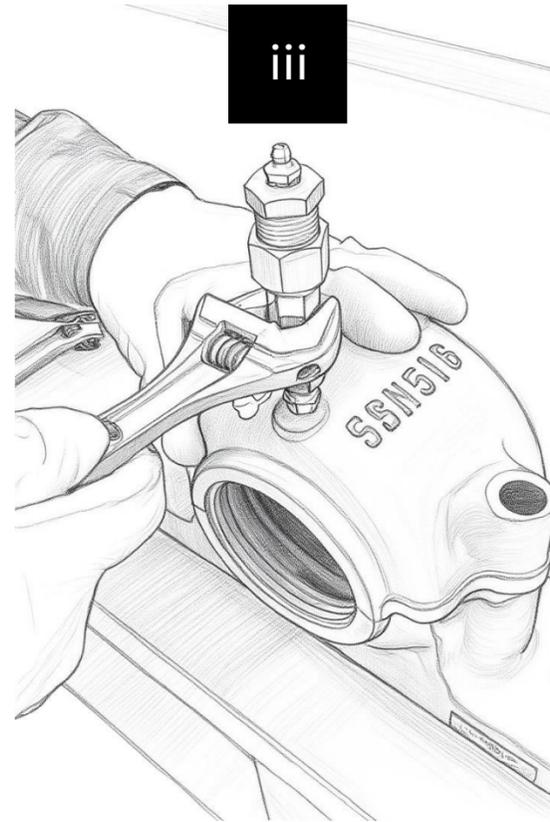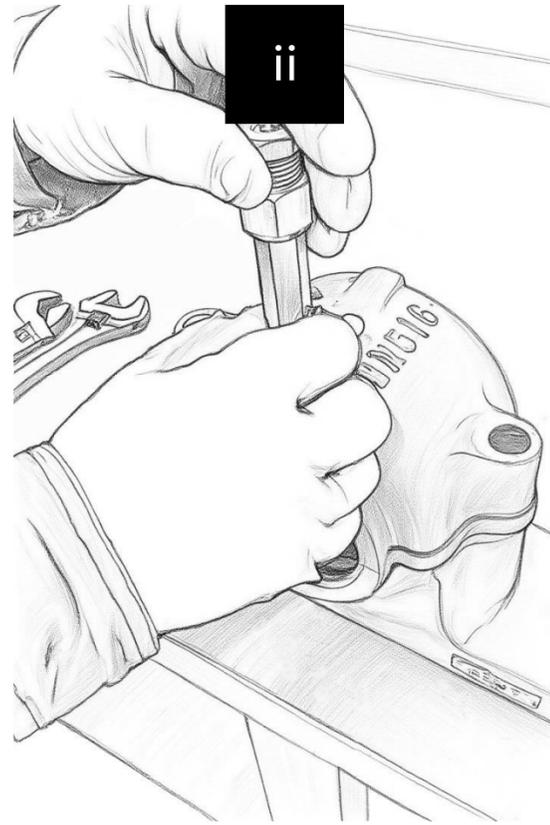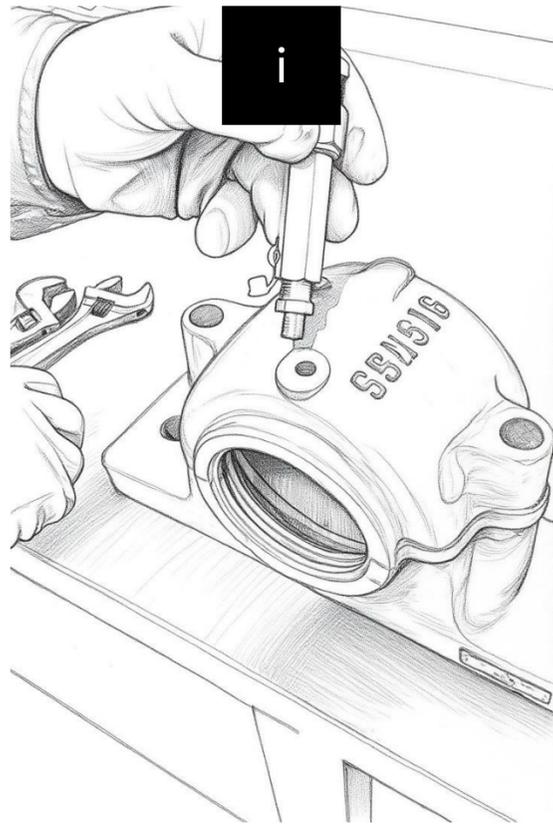


i. Remove the grease nipple.

ii. Thread lock the direct mount in place.

iii. Insert and tighten the 1/2" grease nipple adaptor.


Note: leave in place until the EasyLube unit is ready to be installed to prevent any contamination.

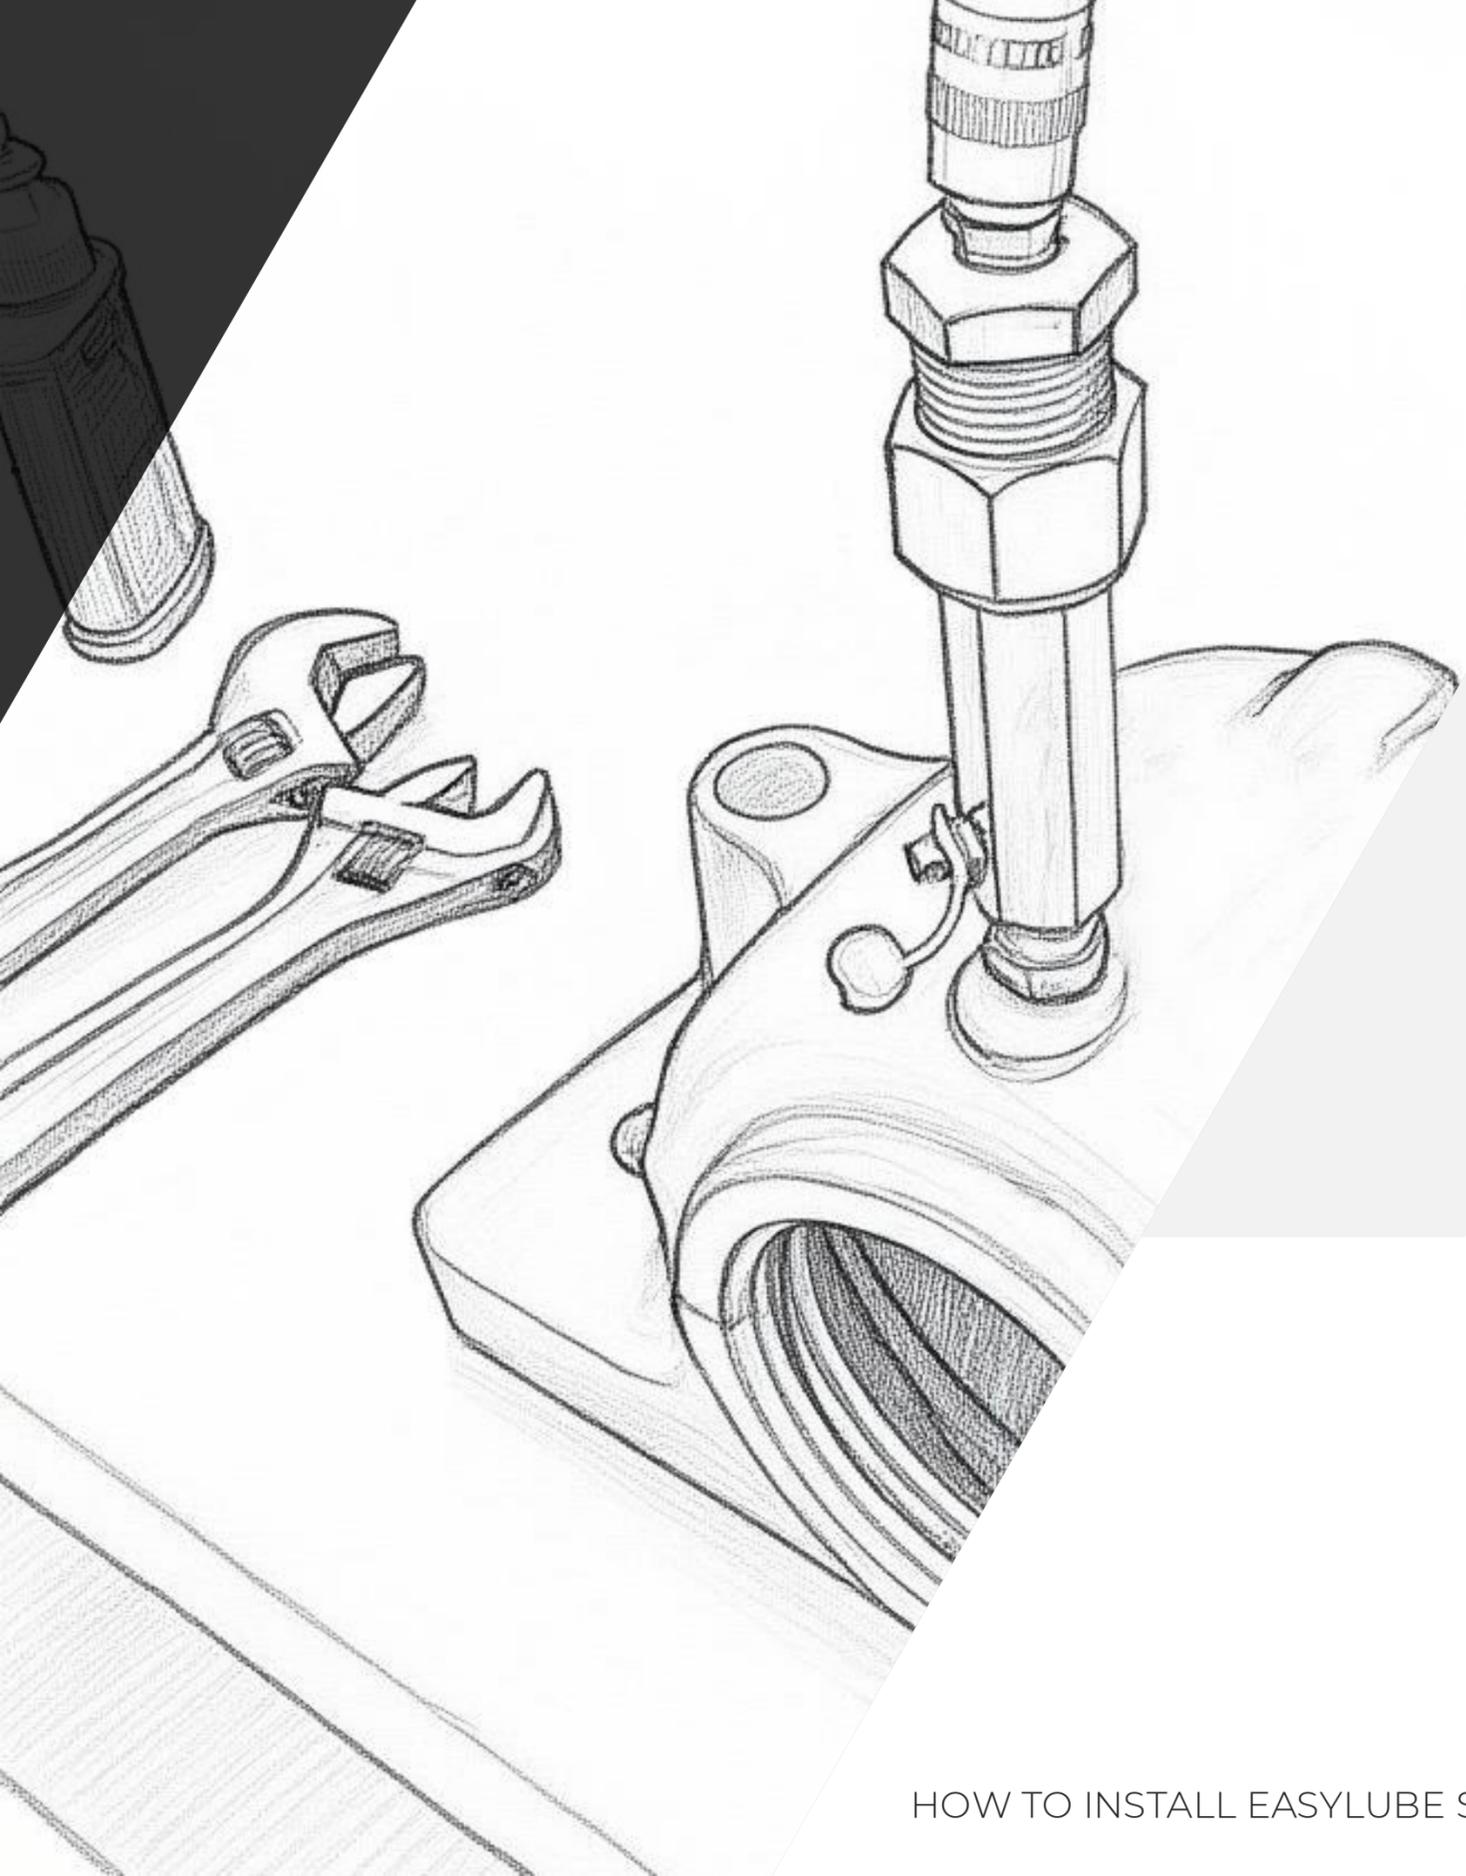

## STEP 5

Purge the direct mount with grease.


Prepare the Easylube Drive Unit  
and Grease Cartridge.

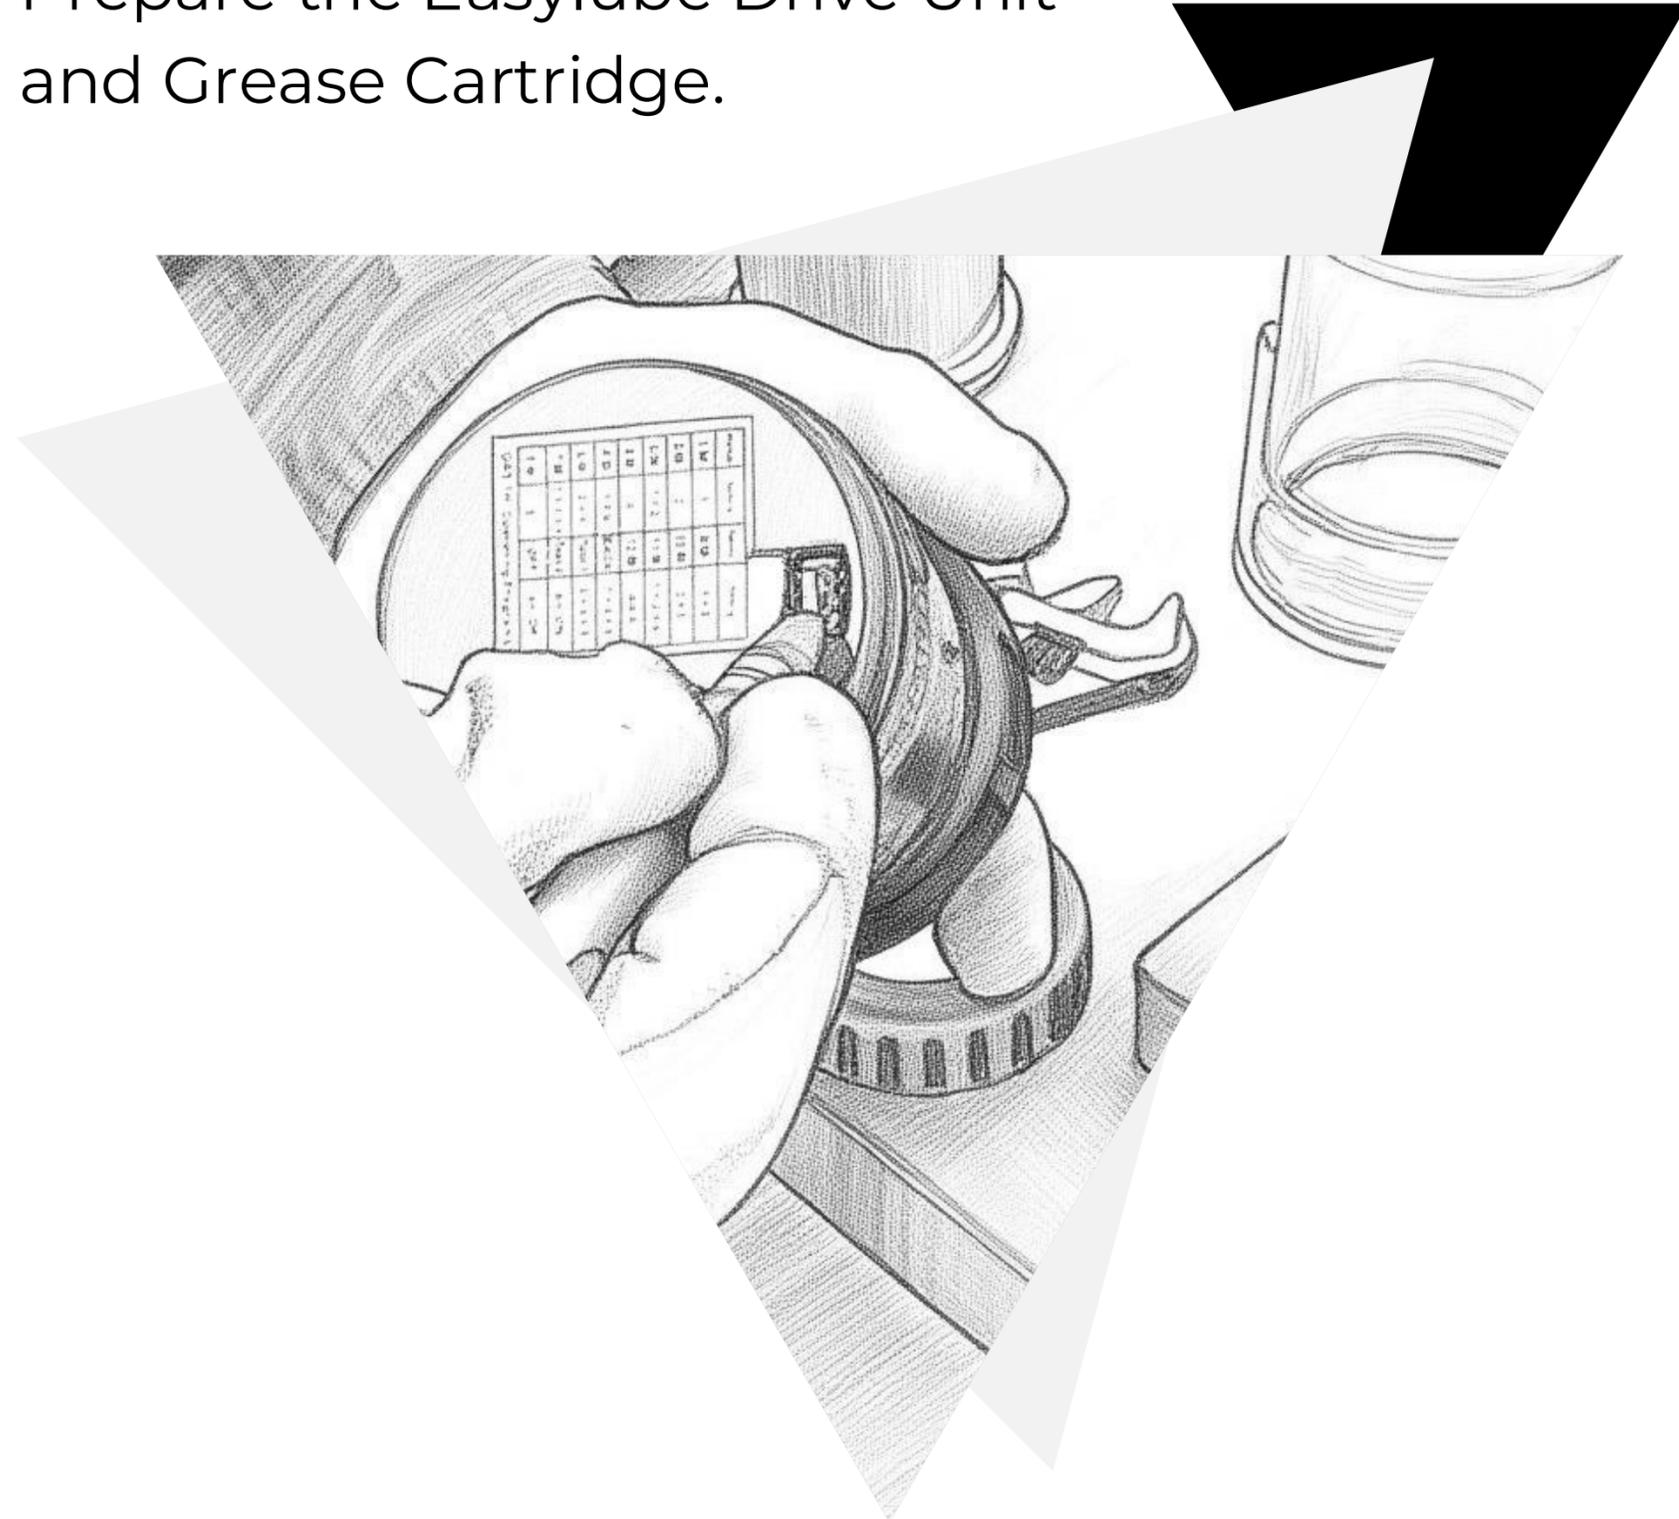

## STEP 6

Ensure the dipswitches are set to  
the correct monthly setting.

NOTE: see pages 14 & 15 for device settings

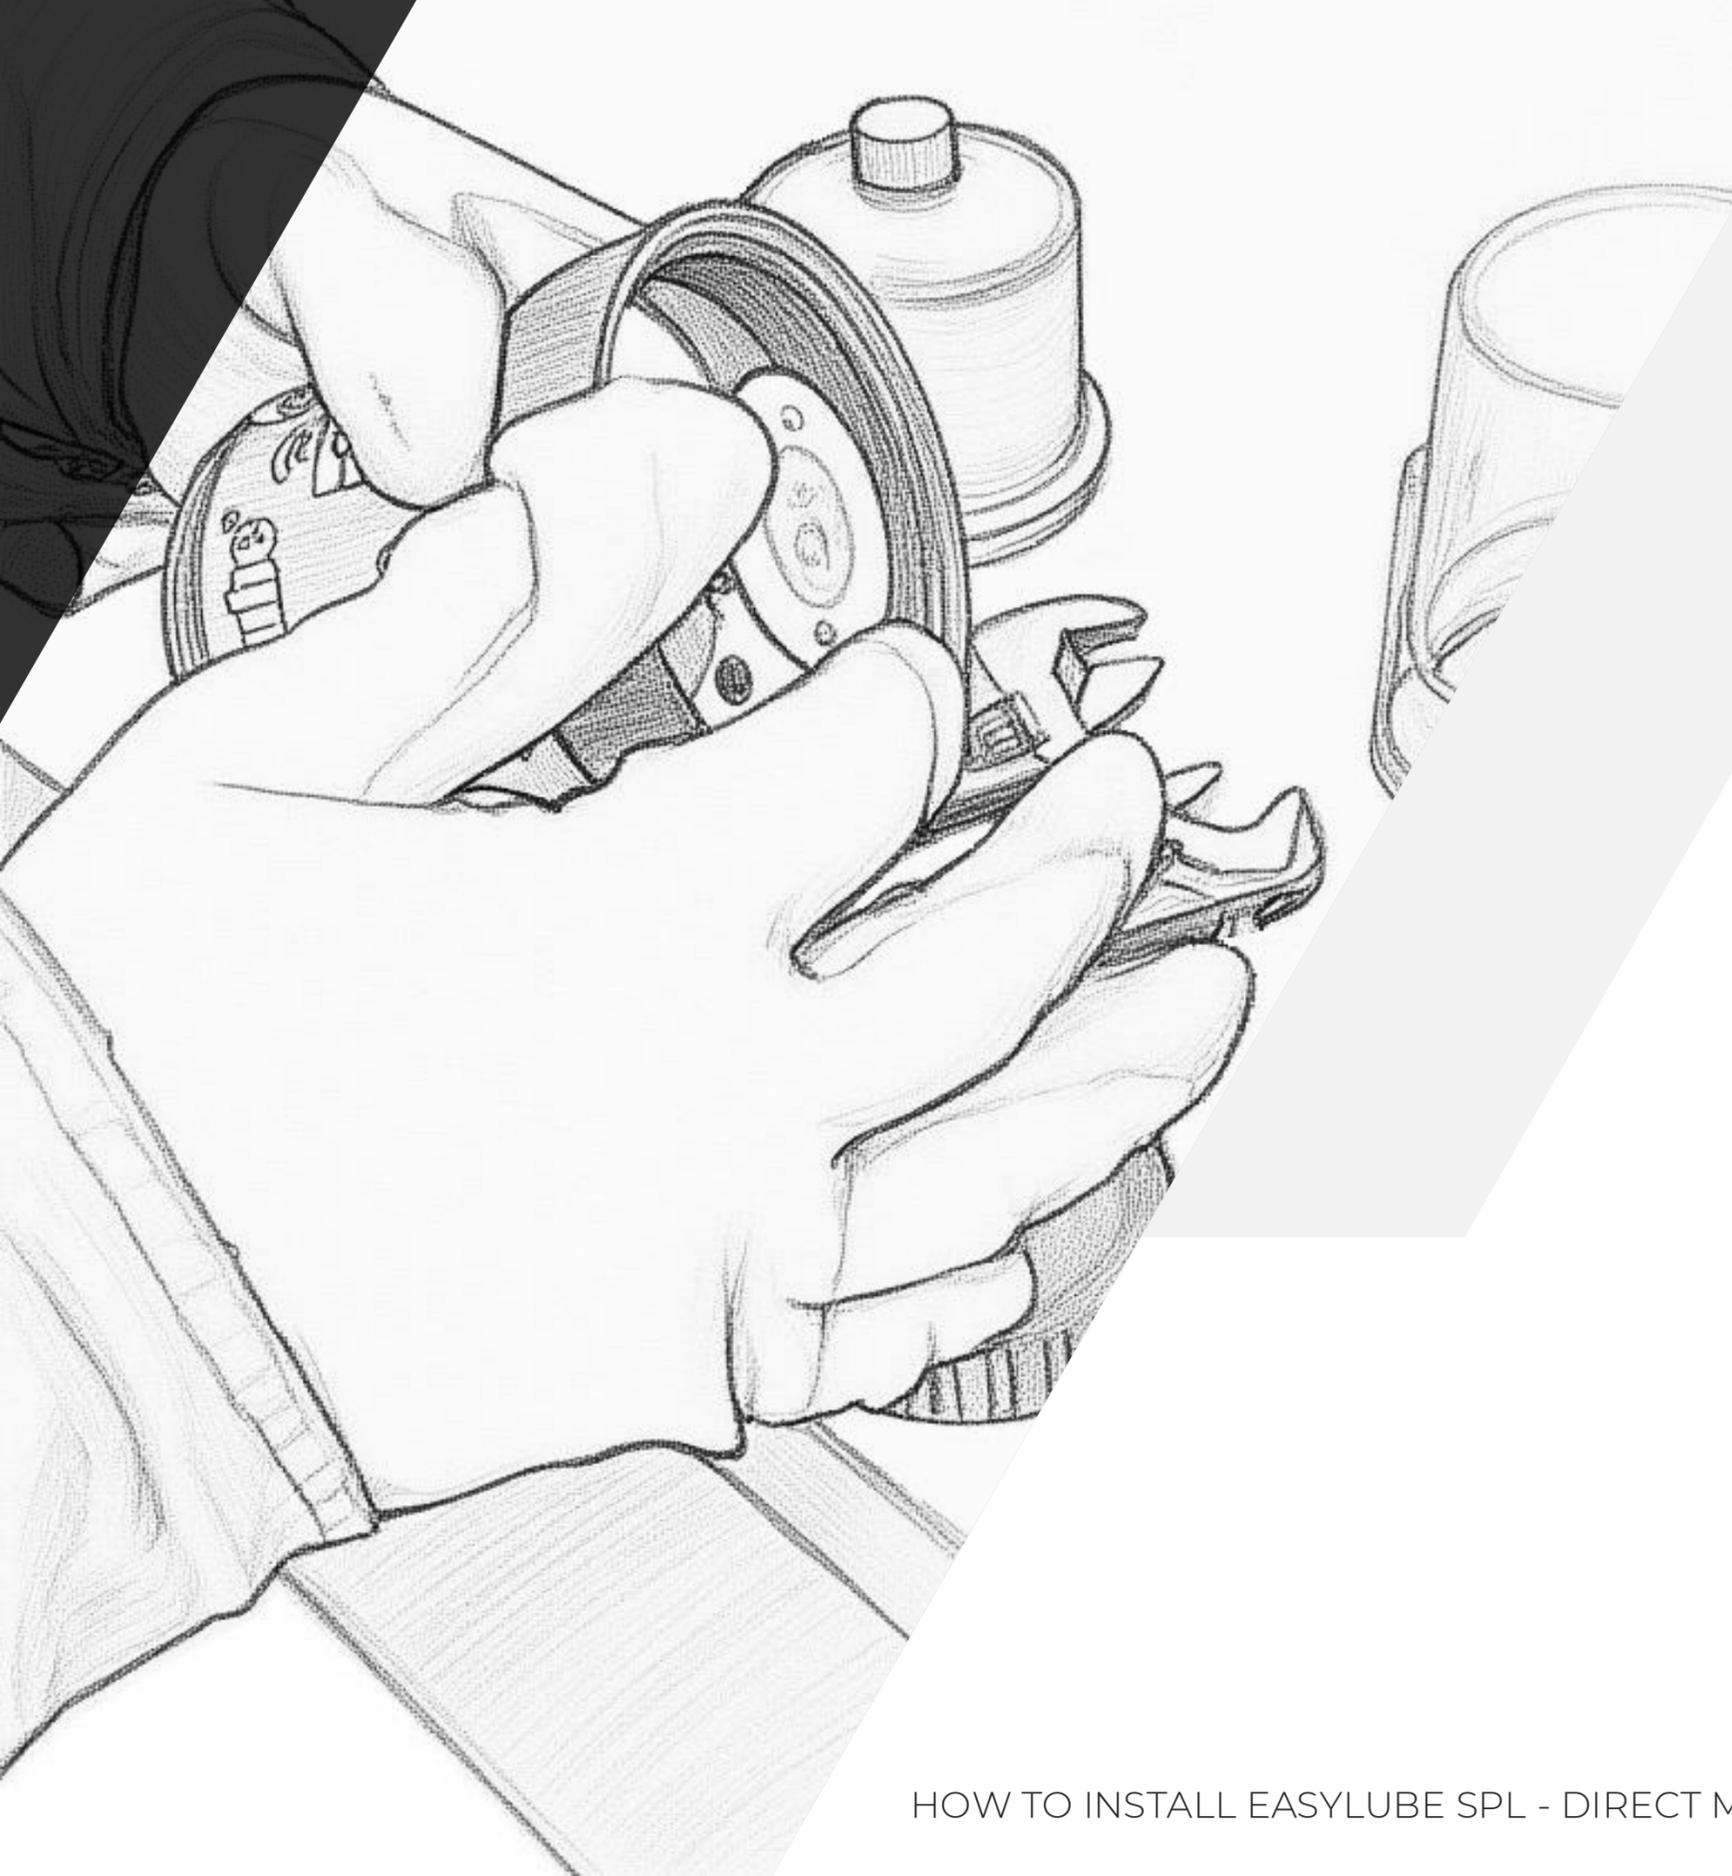

## STEP 7


Wind the piston back until the rubber stopper just touches the metal base of the Drive Unit.

Then release the piston (turn anti-clockwise) **FOUR ROTATIONS**.

## STEP 8

Loosely screw the new Cartridge onto the Easylube Drive unit.



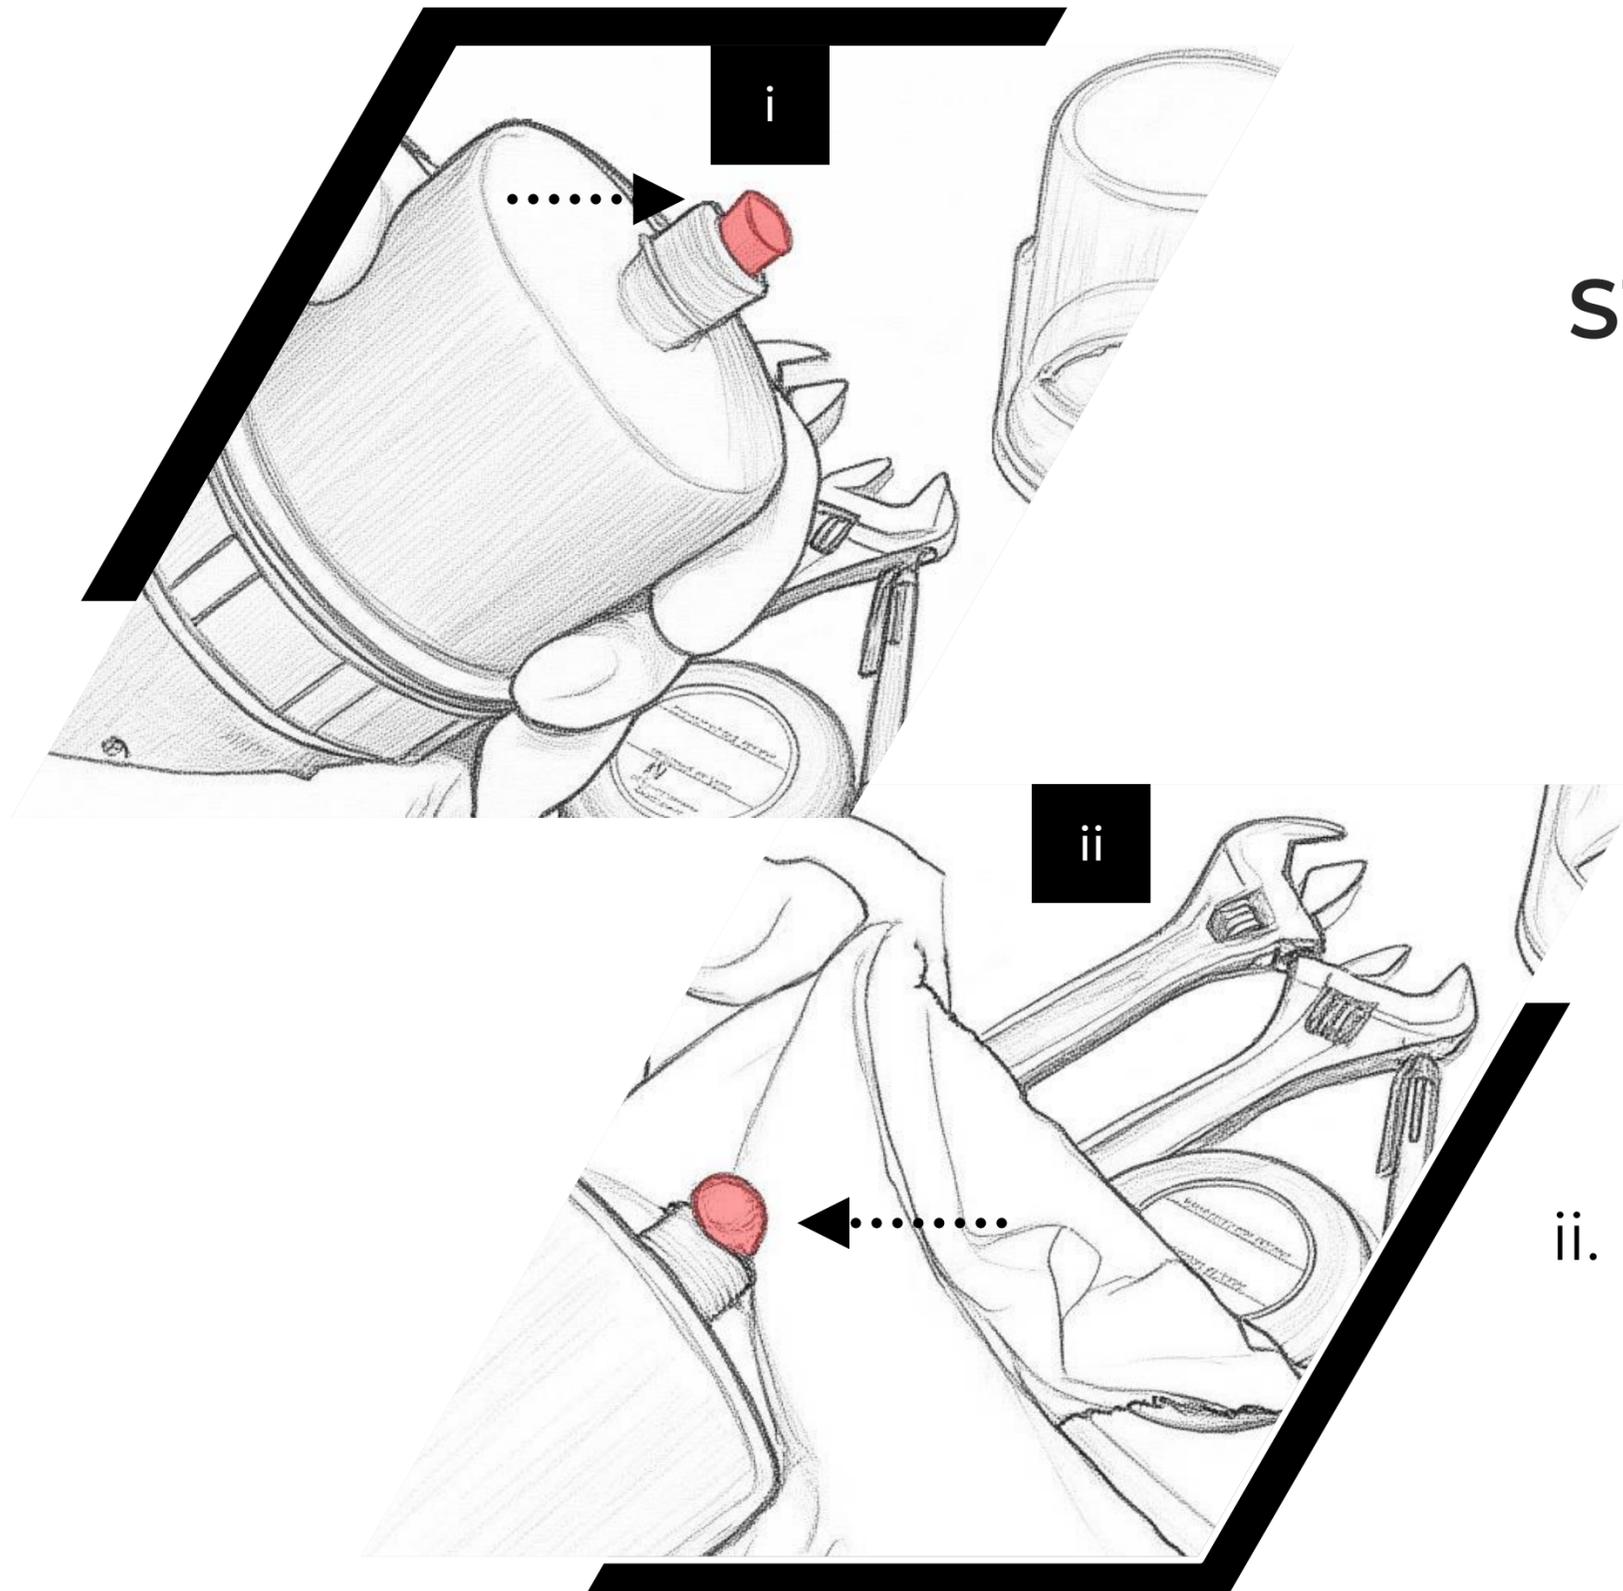


## STEP 9

- i. Remove the small red cap, continue to screw the Cartridge onto the EasyLube Drive unit and purge extra grease.


Note: Grease must purge out, this confirms the Drive Unit's piston is locked into the Cartridge plunger.

- ii. Once the Cartridge is screwed tight, wipe the grease level with the Cartridge outlet port. This is in preparation for the test run.

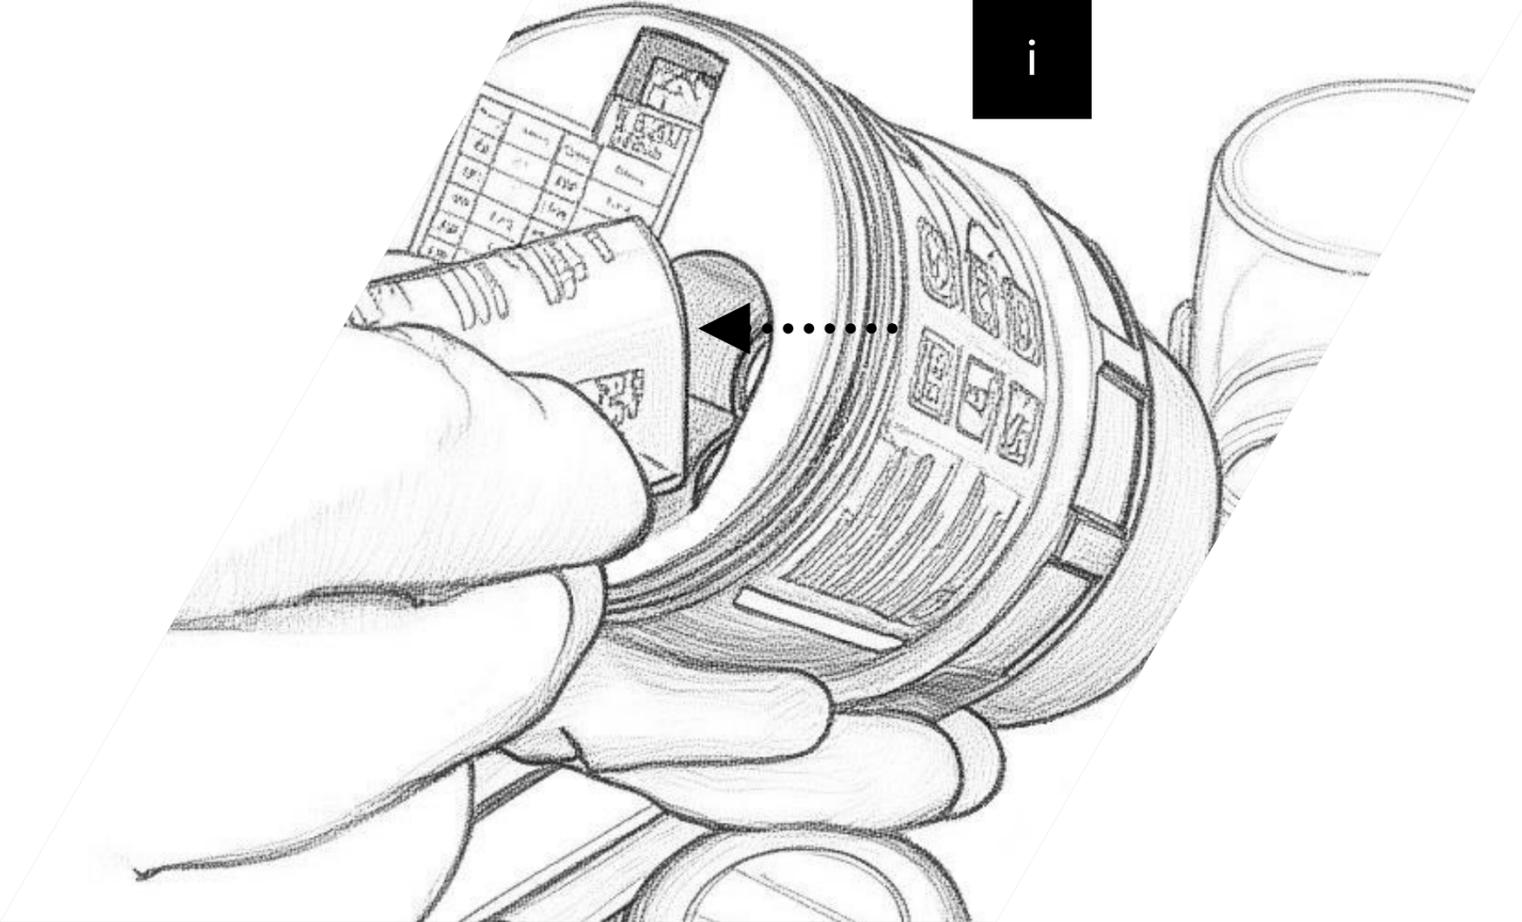

## STEP 10

- i. Install the new battery (ensure the plastic wrapping has been removed).
- ii. Refit the top screw cap.

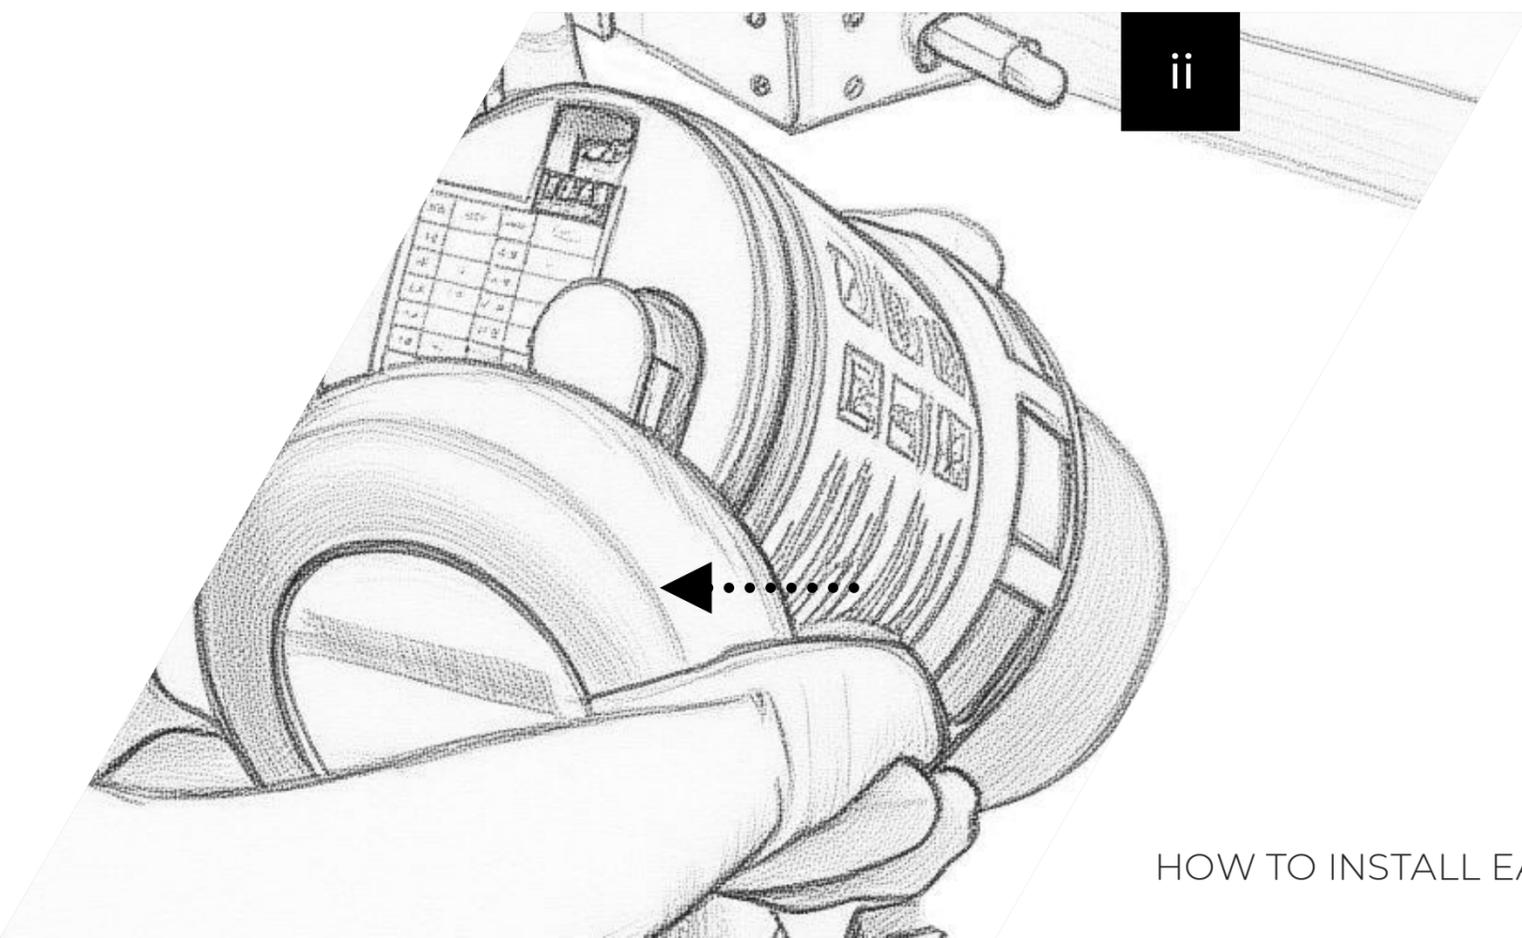



## STEP 11

The unit will now flash green a few times and run a test cycle.



**IMPORTANT:** the unit purges a small amount of grease as shown in this image.

Do **NOT** wipe this grease off.

## STEP 12

The unit is now ready to refit.

- i. Remove the grease nipple fitting.
- ii. With the grease still purged out of the new Cartridge, screw the Easylube unit onto the fitting.
- iii. Put the dust cover over the Drive Unit.

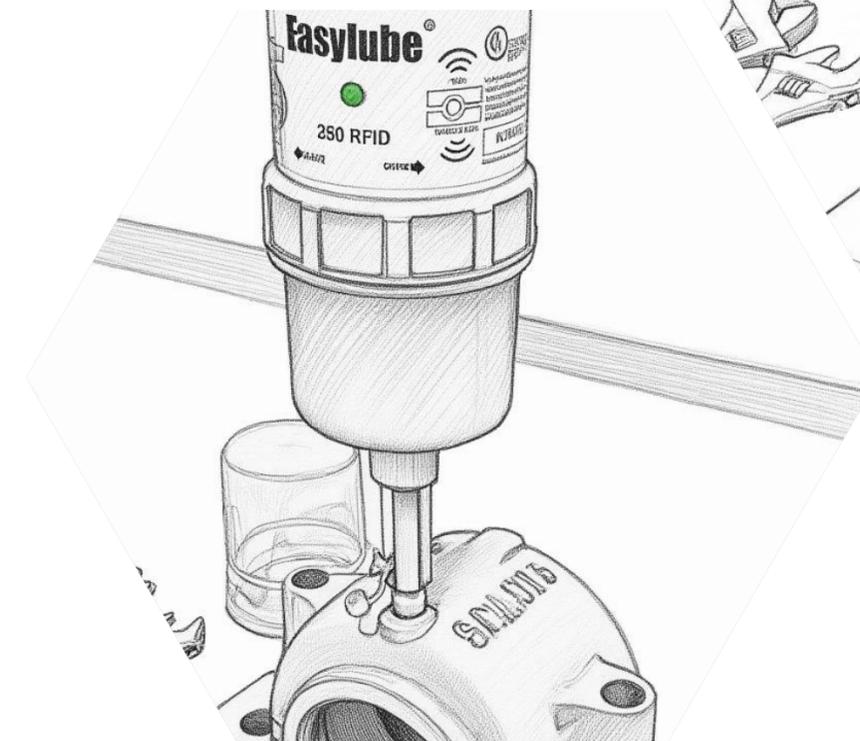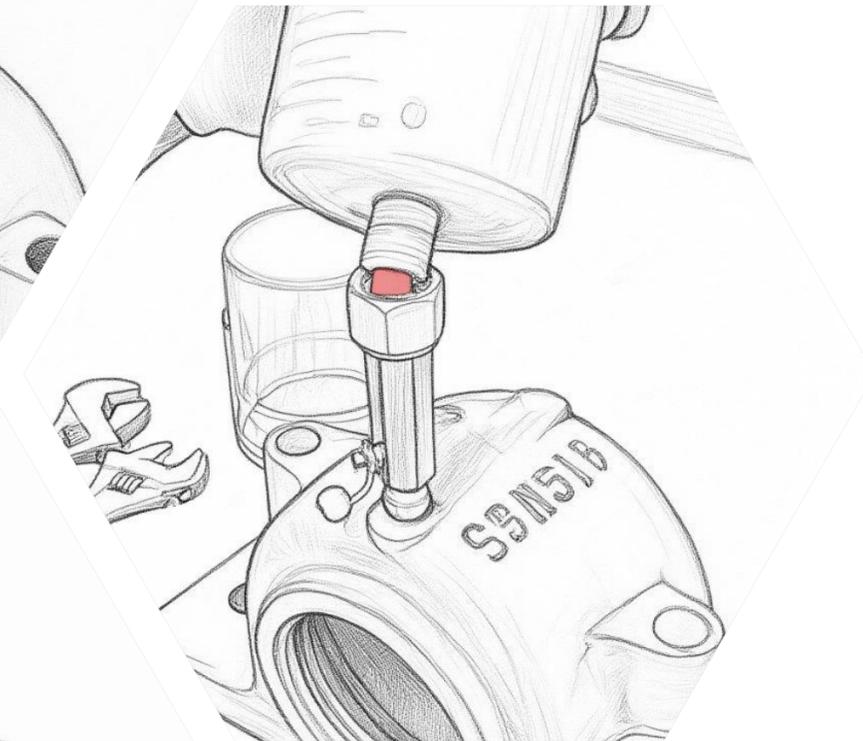

# EASYLUBE 60ml SETTINGS



Dispense Period	Dip Switch Lever	Dip Switch	Time Span Between Cycles	Weekly Settings						Monthly Settings					
				Amount Per Day		Amount Per Week		Amount Per Month		Amount Per Day		Amount Per Week		Amount Per Month	
				ml	oz	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz
Weeks or Months	On/Off	Settings	Hours												
1	1		2	8.57	0.290	60.00	2.029	257.14	8.695	2.00	0.068	14.00	0.473	60.00	2.029
2	2		4	4.29	0.145	30.00	1.014	128.57	4.348	1.00	0.034	7.00	0.237	30.00	1.014
3	1 and 2		6	2.86	0.097	20.00	0.676	85.71	2.898	0.67	0.023	4.67	0.158	20.00	0.676
4	4		8	2.14	0.072	15.00	0.507	64.29	2.174	0.50	0.017	3.50	0.118	15.00	0.507
5	1 and 4		10	1.71	0.058	12.00	0.406	51.43	1.739	0.40	0.014	2.80	0.095	12.00	0.406
6	2 and 4		12	1.43	0.048	10.00	0.338	42.86	1.449	0.33	0.011	2.33	0.079	10.00	0.338
7	1, 2 and 4		14	1.22	0.041	8.57	0.290	36.73	1.242	0.29	0.010	2.00	0.068	8.57	0.290
8	8		16	1.07	0.036	7.50	0.254	32.14	1.087	0.25	0.008	1.75	0.059	7.50	0.254
9	1 and 8		18	0.95	0.032	6.67	0.225	28.57	0.966	0.22	0.008	1.56	0.053	6.67	0.225
10	2 and 8		20	0.86	0.029	6.00	0.203	25.71	0.870	0.20	0.007	1.40	0.047	6.00	0.203
11	1, 2 and 8		22	0.78	0.026	5.45	0.184	23.38	0.790	0.18	0.006	1.27	0.043	5.45	0.184
12	4 and 8		24	0.71	0.024	5.00	0.169	21.43	0.725	0.17	0.006	1.17	0.039	5.00	0.169

# EASYLUBE 150ml SETTINGS



Dispense Period	Dip Switch Lever	Dip Switch	Time Span Between Cycles	Weekly Settings						Monthly Settings					
				Amount Per Day		Amount Per Week		Amount Per Month		Amount Per Day		Amount Per Week		Amount Per Month	
month(s)	On/Off	Settings	Hours	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz
1	1		2	21.43	0.725	150.00	5.072	642.86	21.738	5.00	0.169	35.00	1.183	150.00	5.072
2	2		4	10.71	0.362	75.00	2.536	321.43	10.869	2.50	0.085	17.50	0.592	75.00	2.536
3	1 and 2		6	7.14	0.242	50.00	1.691	214.29	7.246	1.67	0.056	11.67	0.394	50.00	1.691
4	4		8	5.36	0.181	37.50	1.268	160.71	5.434	1.25	0.042	8.75	0.296	37.50	1.268
5	1 and 4		10	4.29	0.145	30.00	1.014	128.57	4.348	1.00	0.034	7.00	0.237	30.00	1.014
6	2 and 4		12	3.57	0.121	25.00	0.845	107.14	3.623	0.83	0.028	5.83	0.197	25.00	0.845
7	1, 2 and 4		14	3.06	0.104	21.43	0.725	91.84	3.105	0.71	0.024	5.00	0.169	21.43	0.725
8	8		16	2.68	0.091	18.75	0.634	80.36	2.717	0.63	0.021	4.38	0.148	18.75	0.634
9	1 and 8		18	2.38	0.081	16.67	0.564	71.43	2.415	0.56	0.019	3.89	0.131	16.67	0.564
10	2 and 8		20	2.14	0.072	15.00	0.507	64.29	2.174	0.50	0.017	3.50	0.118	15.00	0.507
11	1, 2 and 8		22	1.95	0.066	13.64	0.461	58.44	1.976	0.45	0.015	3.18	0.108	13.64	0.461
12	4 and 8		24	1.79	0.060	12.50	0.423	53.57	1.811	0.42	0.014	2.92	0.099	12.50	0.423

# EASYLUBE 250ml SETTINGS




Dispense Period	Dip Switch Lever	Dip Switch	Time Span Between Cycles	Weekly Settings						Monthly Settings					
				Amount Per Day		Amount Per Week		Amount Per Month		Amount Per Day		Amount Per Week		Amount Per Month	
month(s)	On/Off	Settings	Hours	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz
1	1		2	35.71	1.208	250.00	8.454	1,071.43	36.229	8.33	0.282	58.33	1.972	250.00	8.454
2	2		4	17.86	0.604	125.00	4.227	535.71	18.115	4.17	0.141	29.17	0.986	125.00	4.227
3	1 and 2		6	11.90	0.403	83.33	2.818	357.14	12.076	2.78	0.094	19.44	0.657	83.33	2.818
4	4		8	8.93	0.302	62.50	2.113	267.86	9.057	2.08	0.070	14.58	0.493	62.50	2.113
5	1 and 4		10	7.14	0.242	50.00	1.691	214.29	7.246	1.67	0.056	11.67	0.394	50.00	1.691
6	2 and 4		12	5.95	0.201	41.67	1.409	178.57	6.038	1.39	0.047	9.72	0.329	41.67	1.409
7	1, 2 and 4		14	5.10	0.173	35.71	1.208	153.06	5.176	1.19	0.040	8.33	0.282	35.71	1.208
8	8		16	4.46	0.151	31.25	1.057	133.93	4.529	1.04	0.035	7.29	0.247	31.25	1.057
9	1 and 8		18	3.97	0.134	27.78	0.939	119.05	4.025	0.93	0.031	6.48	0.219	27.78	0.939
10	2 and 8		20	3.57	0.121	25.00	0.845	107.14	3.623	0.83	0.028	5.83	0.197	25.00	0.845
11	1, 2 and 8		22	3.25	0.110	22.73	0.769	97.40	3.294	0.76	0.026	5.30	0.179	22.73	0.769
12	4 and 8		24	2.98	0.101	20.83	0.704	89.29	3.019	0.69	0.023	4.86	0.164	20.83	0.704

# EASYLUBE 500ml SETTINGS



Dispense Period	Dip Switch Lever	Dip Switch	Time Span Between Cycles	Weekly Settings						Monthly Settings					
				Amount Per Day		Amount Per Week		Amount Per Month		Amount Per Day		Amount Per Week		Amount Per Month	
month(s)	On/Off	Settings	Hours	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz	ml	oz
1	1		2	71.43	2.415	500.00	16.907	2,142.86	72.459	16.67	0.564	116.67	3.945	500.00	16.907
2	2		4	35.71	1.208	250.00	8.454	1,071.43	36.229	8.33	0.282	58.33	1.972	250.00	8.454
3	1 and 2		6	23.81	0.805	166.67	5.636	714.29	24.153	5.56	0.188	38.89	1.315	166.67	5.636
4	4		8	17.86	0.604	125.00	4.227	535.71	18.115	4.17	0.141	29.17	0.986	125.00	4.227
5	1 and 4		10	14.29	0.483	100.00	3.381	428.57	14.492	3.33	0.113	23.33	0.789	100.00	3.381
6	2 and 4		12	11.90	0.403	83.33	2.818	357.14	12.076	2.78	0.094	19.44	0.657	83.33	2.818
7	1, 2 and 4		14	10.20	0.345	71.43	2.415	306.12	10.351	2.38	0.081	16.67	0.564	71.43	2.415
8	8		16	8.93	0.302	62.50	2.113	267.86	9.057	2.08	0.070	14.58	0.493	62.50	2.113
9	1 and 8		18	7.94	0.268	55.56	1.879	238.10	8.051	1.85	0.063	12.96	0.438	55.56	1.879
10	2 and 8		20	7.14	0.242	50.00	1.691	214.29	7.246	1.67	0.056	11.67	0.394	50.00	1.691
11	1, 2 and 8		22	6.49	0.220	45.45	1.537	194.81	6.587	1.52	0.051	10.61	0.359	45.45	1.537
12	4 and 8		24	5.95	0.201	41.67	1.409	178.57	6.038	1.39	0.047	9.72	0.329	41.67	1.409

# EASYLUBE RFID

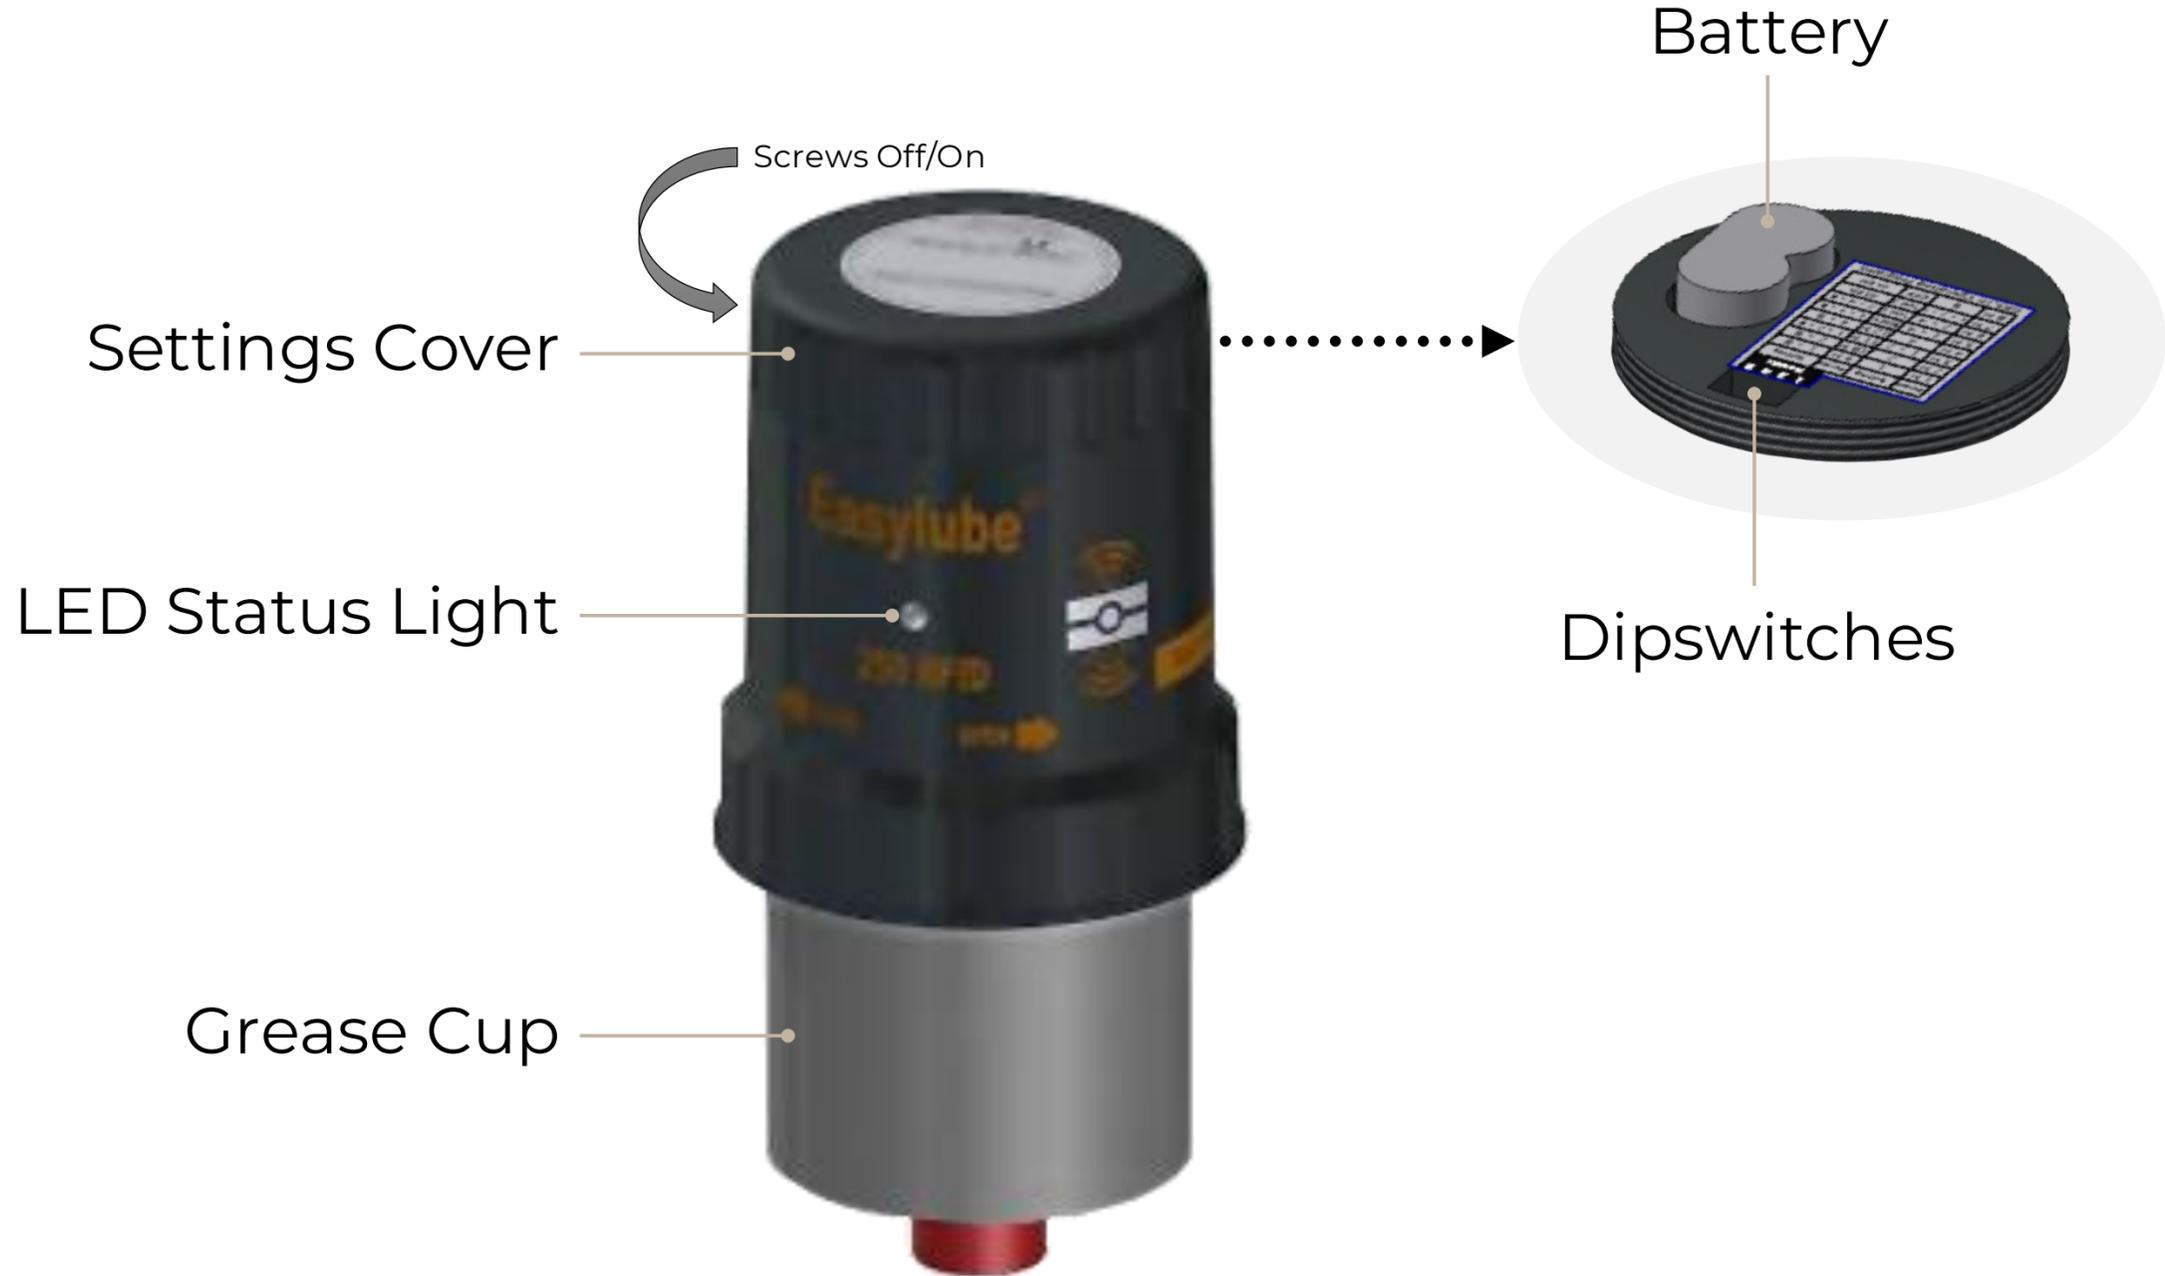

## INSTALL EASYLUBE DRIVE UNIT – DIRECT MOUNT



Step	Task	Completed
1	Ensure the check valve arrow is pointing in the direction of grease flow. Lock tight the 1/4" thread of the required fitting into the bottom of the check valve.	<input type="checkbox"/>
2	Install the 1/2" – 1/4" fitting into the top of the check valve.	<input type="checkbox"/>
3	Clean the grease nipple. Hand grease the nipple to ensure the bearing is accepting grease and isn't blocked. Clean any excess grease from the grease nipple.	<input type="checkbox"/>
4	Remove the grease nipple. Thread lock the direct mount in place. Insert the 1/2" grease nipple adaptor. Leave in place until the Easylube unit is ready to be installed to prevent any contamination.	<input type="checkbox"/>
5	Purge the direct mount with grease.	<input type="checkbox"/>
6	Ensure the dipswitches are set to the correct monthly setting.	<input type="checkbox"/>
7	Wind the piston back until the rubber stopper just touches the metal base of the Drive Unit. Then release the piston (turn anti-clockwise) FOUR ROTATIONS.	<input type="checkbox"/>
8	Loosely screw the new Cartridge onto the Easylube Drive unit.	<input type="checkbox"/>
9	Remove the small red cap, continue to screw the Cartridge onto the Easylube Drive unit and purge extra grease. Once the Cartridge is screwed tight, wipe the grease level with the Cartridge outlet port. This is in preparation for the test run.	<input type="checkbox"/>
10	Install the new battery (ensure the plastic wrapping has been removed) and refit the top screw cap.	<input type="checkbox"/>
11	The unit will now flash green a few times and run a test cycle. It is important to note that the unit purges a small amount of grease. Do NOT wipe this grease off.	<input type="checkbox"/>
12	Remove the grease nipple fitting. With the grease still purged out of the new Cartridge, screw the Easylube unit onto the fitting. Put the dust cover over the Drive Unit.	<input type="checkbox"/>

## CONTACT DETAILS

 1800 228 622

 [support@catmacs.com](mailto:support@catmacs.com)

 [www.catmacs.com](http://www.catmacs.com)

