



HOW TO REPLACE EASYLUBE CARTRIDGES

www.catmacs.com





STEP 1

Clean the debris from around the existing EasyLube prior to removal.



STEP 2

Unscrew the EasyLube from the bracket and insert a grease nipple into the bracket fitting to prevent contamination.

STEP 3

If required, hand grease the fitting to clear any blockages.




STEP 4

Remove the battery first to provide the system with time to reboot.


Also remove the old grease Cartridge from the EasyLube Drive Unit.

Dispose of both the battery and old grease Cartridge according to site policy.

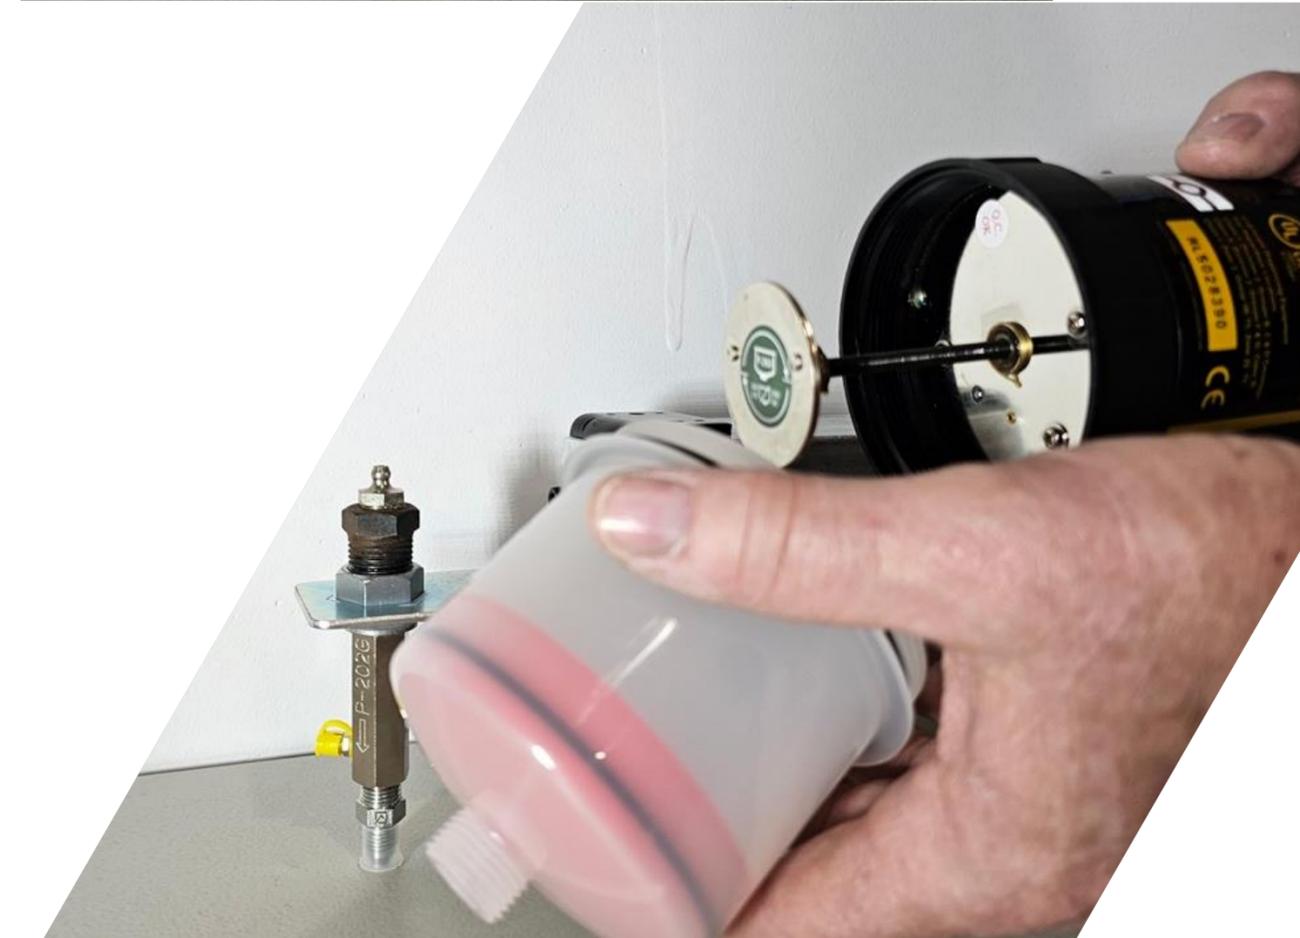

STEP 5

Place a dab of grease on the piston screw if dry.

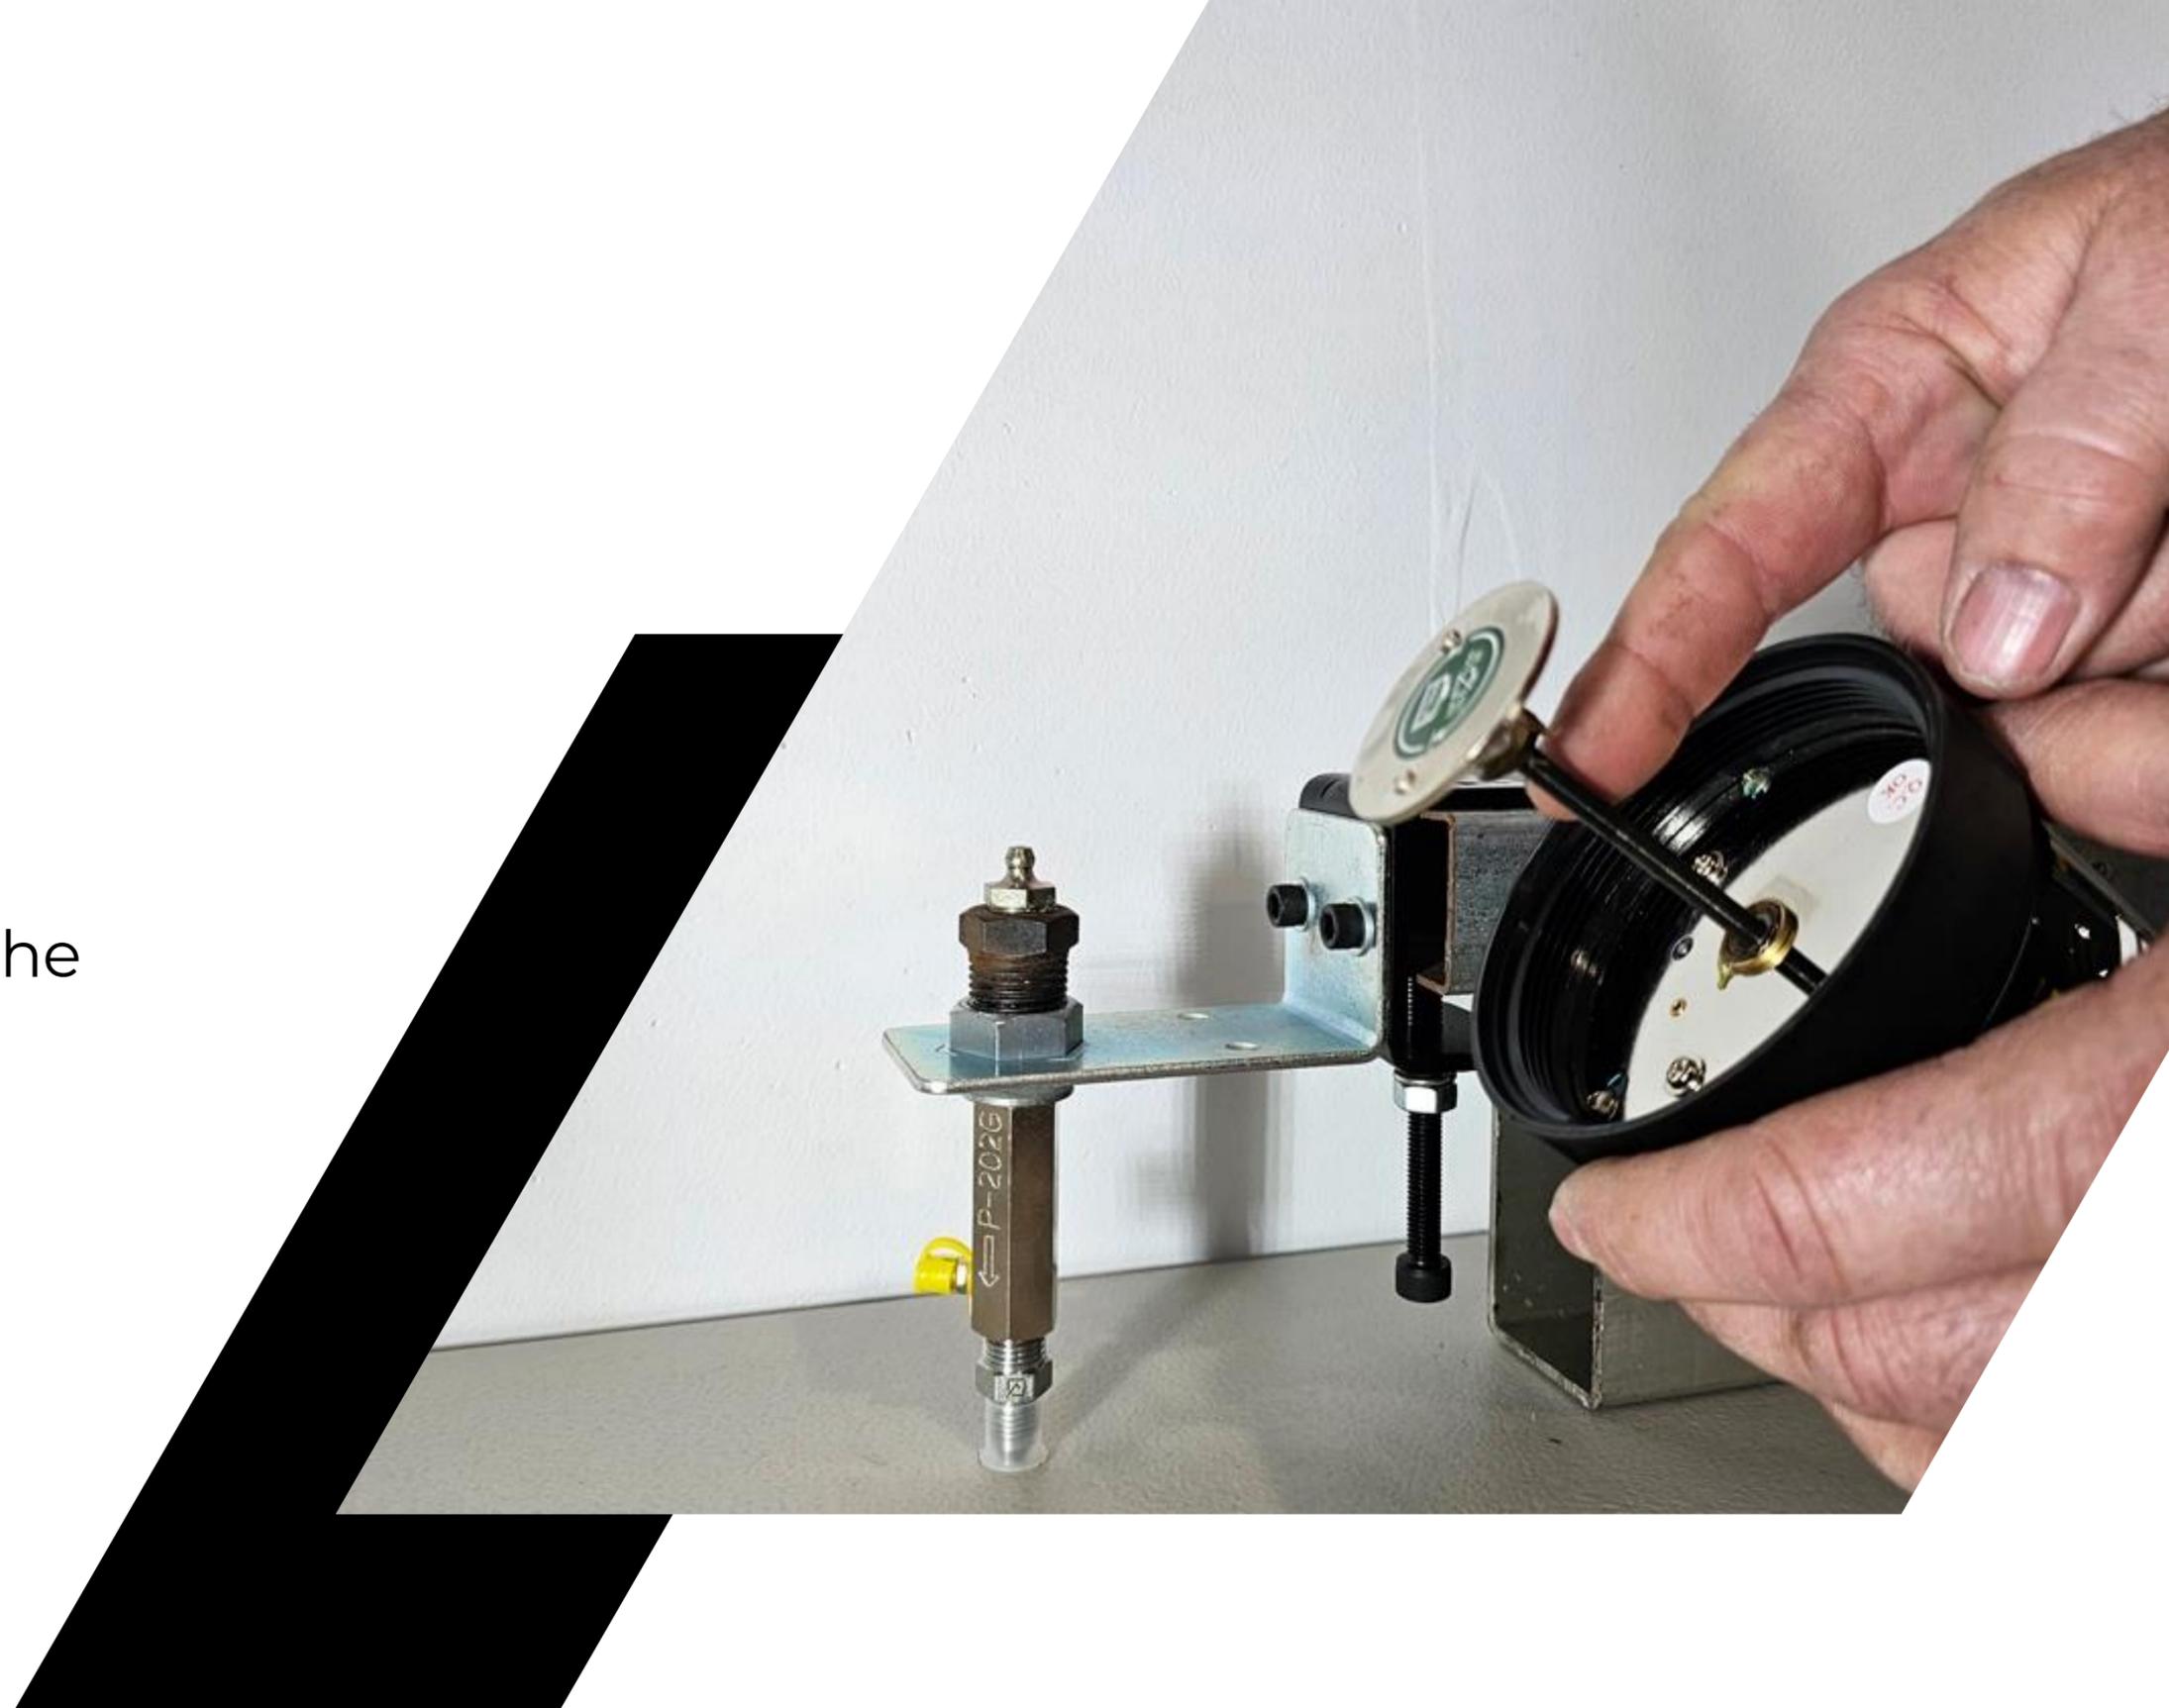



STEP 6

Wind the piston back until the rubber stopper just touches the metal base of the Drive Unit.

Then release the piston (turn anti-clockwise) **FOUR ROTATIONS.**

Cordless Dremel: < 3 seconds

Spin Drive by Hand: ~10 seconds





STEP 7

Loosely screw the new Cartridge onto the Easylube Drive unit. Remove the small red cap and purge extra grease into a rag.

Note: Grease must purge out, this confirms the Drive Unit's piston is locked into the Cartridge plunger.



STEP 8

Once the Cartridge is screwed tight, wipe the grease level with the Cartridge outlet port.

This is in preparation for the test run.

STEP 9

Ensure the dipswitches are set to the correct monthly setting.

Note: Dipswitches are set to 3 months by default

- Page 16: EasyLube RFID 250ml Device Settings



STEP 10

Install the new battery and refit the top screw cap. The unit will now flash green a few times and run a test cycle.



STEP 11

It is important to note that the unit purges a small amount of grease as shown in this image.





STEP 12

The unit is now ready to refit.

Remove the grease nipple fitting.

With the grease still purged out of new Cartridge, screw the Easylube back onto the bracket fitting.

Put the dust cover back over the Drive Unit.

EASYLUBE 60ml SETTINGS



| Dispense Period | Dip Switch Lever | Dip Switch | Time Span Between Cycles | Weekly Settings | | | | | | Monthly Settings | | | | | |
|-----------------|------------------|------------|--------------------------|-----------------|-------|-----------------|-------|------------------|-------|------------------|-------|-----------------|-------|------------------|-------|
| | | | | Amount Per Day | | Amount Per Week | | Amount Per Month | | Amount Per Day | | Amount Per Week | | Amount Per Month | |
| | | | | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz |
| Weeks or Months | On/Off | Settings | Hours | | | | | | | | | | | | |
| 1 | 1 | | 2 | 8.57 | 0.290 | 60.00 | 2.029 | 257.14 | 8.695 | 2.00 | 0.068 | 14.00 | 0.473 | 60.00 | 2.029 |
| 2 | 2 | | 4 | 4.29 | 0.145 | 30.00 | 1.014 | 128.57 | 4.348 | 1.00 | 0.034 | 7.00 | 0.237 | 30.00 | 1.014 |
| 3 | 1 and 2 | | 6 | 2.86 | 0.097 | 20.00 | 0.676 | 85.71 | 2.898 | 0.67 | 0.023 | 4.67 | 0.158 | 20.00 | 0.676 |
| 4 | 4 | | 8 | 2.14 | 0.072 | 15.00 | 0.507 | 64.29 | 2.174 | 0.50 | 0.017 | 3.50 | 0.118 | 15.00 | 0.507 |
| 5 | 1 and 4 | | 10 | 1.71 | 0.058 | 12.00 | 0.406 | 51.43 | 1.739 | 0.40 | 0.014 | 2.80 | 0.095 | 12.00 | 0.406 |
| 6 | 2 and 4 | | 12 | 1.43 | 0.048 | 10.00 | 0.338 | 42.86 | 1.449 | 0.33 | 0.011 | 2.33 | 0.079 | 10.00 | 0.338 |
| 7 | 1, 2 and 4 | | 14 | 1.22 | 0.041 | 8.57 | 0.290 | 36.73 | 1.242 | 0.29 | 0.010 | 2.00 | 0.068 | 8.57 | 0.290 |
| 8 | 8 | | 16 | 1.07 | 0.036 | 7.50 | 0.254 | 32.14 | 1.087 | 0.25 | 0.008 | 1.75 | 0.059 | 7.50 | 0.254 |
| 9 | 1 and 8 | | 18 | 0.95 | 0.032 | 6.67 | 0.225 | 28.57 | 0.966 | 0.22 | 0.008 | 1.56 | 0.053 | 6.67 | 0.225 |
| 10 | 2 and 8 | | 20 | 0.86 | 0.029 | 6.00 | 0.203 | 25.71 | 0.870 | 0.20 | 0.007 | 1.40 | 0.047 | 6.00 | 0.203 |
| 11 | 1, 2 and 8 | | 22 | 0.78 | 0.026 | 5.45 | 0.184 | 23.38 | 0.790 | 0.18 | 0.006 | 1.27 | 0.043 | 5.45 | 0.184 |
| 12 | 4 and 8 | | 24 | 0.71 | 0.024 | 5.00 | 0.169 | 21.43 | 0.725 | 0.17 | 0.006 | 1.17 | 0.039 | 5.00 | 0.169 |

EASYLUBE 150ml SETTINGS



| Dispense Period | Dip Switch Lever | Dip Switch | Time Span Between Cycles | Weekly Settings | | | | | | Monthly Settings | | | | | |
|-----------------|------------------|------------|--------------------------|-----------------|-------|-----------------|-------|------------------|--------|------------------|-------|-----------------|-------|------------------|-------|
| | | | | Amount Per Day | | Amount Per Week | | Amount Per Month | | Amount Per Day | | Amount Per Week | | Amount Per Month | |
| month(s) | On/Off | Settings | Hours | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz |
| 1 | 1 | | 2 | 21.43 | 0.725 | 150.00 | 5.072 | 642.86 | 21.738 | 5.00 | 0.169 | 35.00 | 1.183 | 150.00 | 5.072 |
| 2 | 2 | | 4 | 10.71 | 0.362 | 75.00 | 2.536 | 321.43 | 10.869 | 2.50 | 0.085 | 17.50 | 0.592 | 75.00 | 2.536 |
| 3 | 1 and 2 | | 6 | 7.14 | 0.242 | 50.00 | 1.691 | 214.29 | 7.246 | 1.67 | 0.056 | 11.67 | 0.394 | 50.00 | 1.691 |
| 4 | 4 | | 8 | 5.36 | 0.181 | 37.50 | 1.268 | 160.71 | 5.434 | 1.25 | 0.042 | 8.75 | 0.296 | 37.50 | 1.268 |
| 5 | 1 and 4 | | 10 | 4.29 | 0.145 | 30.00 | 1.014 | 128.57 | 4.348 | 1.00 | 0.034 | 7.00 | 0.237 | 30.00 | 1.014 |
| 6 | 2 and 4 | | 12 | 3.57 | 0.121 | 25.00 | 0.845 | 107.14 | 3.623 | 0.83 | 0.028 | 5.83 | 0.197 | 25.00 | 0.845 |
| 7 | 1, 2 and 4 | | 14 | 3.06 | 0.104 | 21.43 | 0.725 | 91.84 | 3.105 | 0.71 | 0.024 | 5.00 | 0.169 | 21.43 | 0.725 |
| 8 | 8 | | 16 | 2.68 | 0.091 | 18.75 | 0.634 | 80.36 | 2.717 | 0.63 | 0.021 | 4.38 | 0.148 | 18.75 | 0.634 |
| 9 | 1 and 8 | | 18 | 2.38 | 0.081 | 16.67 | 0.564 | 71.43 | 2.415 | 0.56 | 0.019 | 3.89 | 0.131 | 16.67 | 0.564 |
| 10 | 2 and 8 | | 20 | 2.14 | 0.072 | 15.00 | 0.507 | 64.29 | 2.174 | 0.50 | 0.017 | 3.50 | 0.118 | 15.00 | 0.507 |
| 11 | 1, 2 and 8 | | 22 | 1.95 | 0.066 | 13.64 | 0.461 | 58.44 | 1.976 | 0.45 | 0.015 | 3.18 | 0.108 | 13.64 | 0.461 |
| 12 | 4 and 8 | | 24 | 1.79 | 0.060 | 12.50 | 0.423 | 53.57 | 1.811 | 0.42 | 0.014 | 2.92 | 0.099 | 12.50 | 0.423 |

EASYLUBE 250ml SETTINGS




| Dispense Period | Dip Switch Lever | Dip Switch | Time Span Between Cycles | Weekly Settings | | | | | | Monthly Settings | | | | | |
|-----------------|------------------|------------|--------------------------|-----------------|-------|-----------------|-------|------------------|--------|------------------|-------|-----------------|-------|------------------|-------|
| | | | | Amount Per Day | | Amount Per Week | | Amount Per Month | | Amount Per Day | | Amount Per Week | | Amount Per Month | |
| | | | | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz |
| month(s) | On/Off | Settings | Hours | | | | | | | | | | | | |
| 1 | 1 | | 2 | 35.71 | 1.208 | 250.00 | 8.454 | 1,071.43 | 36.229 | 8.33 | 0.282 | 58.33 | 1.972 | 250.00 | 8.454 |
| 2 | 2 | | 4 | 17.86 | 0.604 | 125.00 | 4.227 | 535.71 | 18.115 | 4.17 | 0.141 | 29.17 | 0.986 | 125.00 | 4.227 |
| 3 | 1 and 2 | | 6 | 11.90 | 0.403 | 83.33 | 2.818 | 357.14 | 12.076 | 2.78 | 0.094 | 19.44 | 0.657 | 83.33 | 2.818 |
| 4 | 4 | | 8 | 8.93 | 0.302 | 62.50 | 2.113 | 267.86 | 9.057 | 2.08 | 0.070 | 14.58 | 0.493 | 62.50 | 2.113 |
| 5 | 1 and 4 | | 10 | 7.14 | 0.242 | 50.00 | 1.691 | 214.29 | 7.246 | 1.67 | 0.056 | 11.67 | 0.394 | 50.00 | 1.691 |
| 6 | 2 and 4 | | 12 | 5.95 | 0.201 | 41.67 | 1.409 | 178.57 | 6.038 | 1.39 | 0.047 | 9.72 | 0.329 | 41.67 | 1.409 |
| 7 | 1, 2 and 4 | | 14 | 5.10 | 0.173 | 35.71 | 1.208 | 153.06 | 5.176 | 1.19 | 0.040 | 8.33 | 0.282 | 35.71 | 1.208 |
| 8 | 8 | | 16 | 4.46 | 0.151 | 31.25 | 1.057 | 133.93 | 4.529 | 1.04 | 0.035 | 7.29 | 0.247 | 31.25 | 1.057 |
| 9 | 1 and 8 | | 18 | 3.97 | 0.134 | 27.78 | 0.939 | 119.05 | 4.025 | 0.93 | 0.031 | 6.48 | 0.219 | 27.78 | 0.939 |
| 10 | 2 and 8 | | 20 | 3.57 | 0.121 | 25.00 | 0.845 | 107.14 | 3.623 | 0.83 | 0.028 | 5.83 | 0.197 | 25.00 | 0.845 |
| 11 | 1, 2 and 8 | | 22 | 3.25 | 0.110 | 22.73 | 0.769 | 97.40 | 3.294 | 0.76 | 0.026 | 5.30 | 0.179 | 22.73 | 0.769 |
| 12 | 4 and 8 | | 24 | 2.98 | 0.101 | 20.83 | 0.704 | 89.29 | 3.019 | 0.69 | 0.023 | 4.86 | 0.164 | 20.83 | 0.704 |

EASYLUBE 500ml SETTINGS



| Dispense Period | Dip Switch Lever | Dip Switch | Time Span Between Cycles | Weekly Settings | | | | | | Monthly Settings | | | | | |
|-----------------|------------------|------------|--------------------------|-----------------|-------|-----------------|--------|------------------|--------|------------------|-------|-----------------|-------|------------------|--------|
| | | | | Amount Per Day | | Amount Per Week | | Amount Per Month | | Amount Per Day | | Amount Per Week | | Amount Per Month | |
| month(s) | On/Off | Settings | Hours | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz | ml | oz |
| 1 | 1 | | 2 | 71.43 | 2.415 | 500.00 | 16.907 | 2,142.86 | 72.459 | 16.67 | 0.564 | 116.67 | 3.945 | 500.00 | 16.907 |
| 2 | 2 | | 4 | 35.71 | 1.208 | 250.00 | 8.454 | 1,071.43 | 36.229 | 8.33 | 0.282 | 58.33 | 1.972 | 250.00 | 8.454 |
| 3 | 1 and 2 | | 6 | 23.81 | 0.805 | 166.67 | 5.636 | 714.29 | 24.153 | 5.56 | 0.188 | 38.89 | 1.315 | 166.67 | 5.636 |
| 4 | 4 | | 8 | 17.86 | 0.604 | 125.00 | 4.227 | 535.71 | 18.115 | 4.17 | 0.141 | 29.17 | 0.986 | 125.00 | 4.227 |
| 5 | 1 and 4 | | 10 | 14.29 | 0.483 | 100.00 | 3.381 | 428.57 | 14.492 | 3.33 | 0.113 | 23.33 | 0.789 | 100.00 | 3.381 |
| 6 | 2 and 4 | | 12 | 11.90 | 0.403 | 83.33 | 2.818 | 357.14 | 12.076 | 2.78 | 0.094 | 19.44 | 0.657 | 83.33 | 2.818 |
| 7 | 1, 2 and 4 | | 14 | 10.20 | 0.345 | 71.43 | 2.415 | 306.12 | 10.351 | 2.38 | 0.081 | 16.67 | 0.564 | 71.43 | 2.415 |
| 8 | 8 | | 16 | 8.93 | 0.302 | 62.50 | 2.113 | 267.86 | 9.057 | 2.08 | 0.070 | 14.58 | 0.493 | 62.50 | 2.113 |
| 9 | 1 and 8 | | 18 | 7.94 | 0.268 | 55.56 | 1.879 | 238.10 | 8.051 | 1.85 | 0.063 | 12.96 | 0.438 | 55.56 | 1.879 |
| 10 | 2 and 8 | | 20 | 7.14 | 0.242 | 50.00 | 1.691 | 214.29 | 7.246 | 1.67 | 0.056 | 11.67 | 0.394 | 50.00 | 1.691 |
| 11 | 1, 2 and 8 | | 22 | 6.49 | 0.220 | 45.45 | 1.537 | 194.81 | 6.587 | 1.52 | 0.051 | 10.61 | 0.359 | 45.45 | 1.537 |
| 12 | 4 and 8 | | 24 | 5.95 | 0.201 | 41.67 | 1.409 | 178.57 | 6.038 | 1.39 | 0.047 | 9.72 | 0.329 | 41.67 | 1.409 |

EASYLUBE RFID

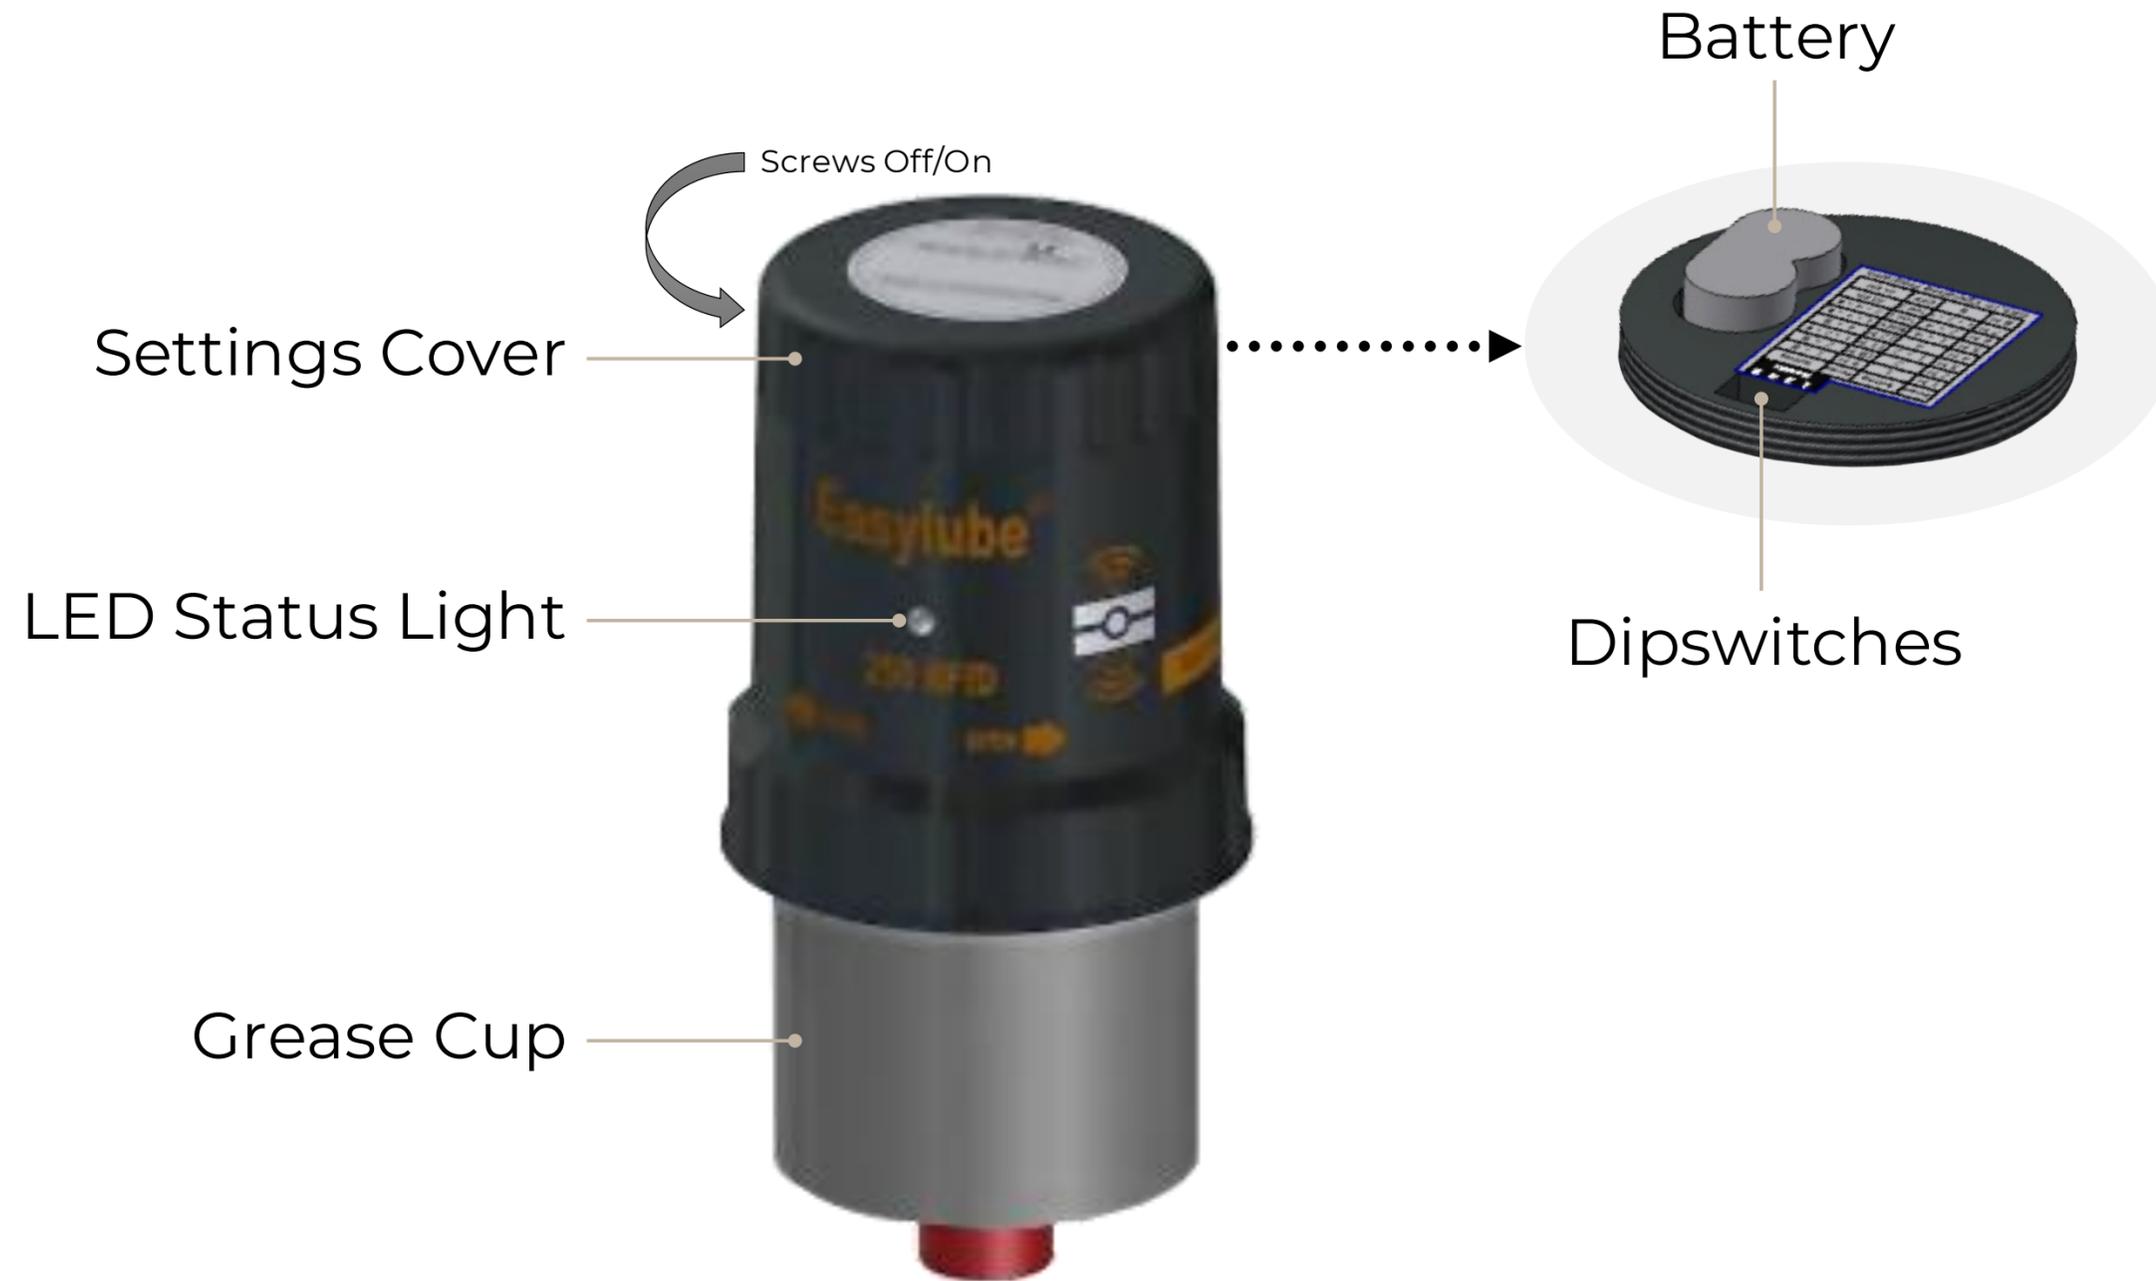

| Step | Task | Completed |
|------|--|--------------------------|
| 1 | Clean off any contamination around the existing Easylube unit. | <input type="checkbox"/> |
| 2 | Unscrew the Easylube from the bracket and insert a grease nipple.. | <input type="checkbox"/> |
| 3 | If required, hand grease the fitting to clear any blockages. | <input type="checkbox"/> |
| 4 | Remove the battery then the grease cup.. Dispose according to site policy. | <input type="checkbox"/> |
| 5 | Place a dab of grease on the screw drive if dry. | <input type="checkbox"/> |
| 6 | Wind back the screw drive until it only just touches the rubber stop and then turn back 4 rotations. | <input type="checkbox"/> |
| 7 | Loosely screw the cup onto the Easylube Drive unit. Remove the small red cap and purge extra grease into a rag. | <input type="checkbox"/> |
| 8 | Once the cup is tight, wipe the grease level with the lubricator outlet port. | <input type="checkbox"/> |
| 9 | Ensure the dipswitches are set to the correct monthly setting. | <input type="checkbox"/> |
| 10 | Install the new battery and refit the top screw cap. The unit will now flash green a few times and run a test cycle. | <input type="checkbox"/> |
| 11 | The unit purges a small amount of grease (important). | <input type="checkbox"/> |
| 12 | The unit is now ready to refit with the dust cover. | <input type="checkbox"/> |

CONTACT DETAILS

 1800 228 622

 support@catmacs.com

 www.catmacs.com